



ELBA

ELECTRIC STEW POT

MODEL: ESP-E3050C(WH)

ESP-E4050C(WH)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS


When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before operating appliance.
2. Do not operate the appliance with a damaged power cord or plug or after the appliance malfunctions, or it is dropped or damaged in any manner. Return the appliance to the nearest authorized dealer or after-sales service centre for examination, repair or mechanical adjustment.
3. Do not use the appliance if the plug, the mains cord or other parts are damaged.
4. To protect against electric shock, do not immerse power cord, plug, or the product body of the appliance in water or any other liquids.
5. Unplug the plug from wall outlet when not in use.
6. Do not expose the appliance to direct sunlight.
7. Do not operate the appliance for other than its intended use.
8. This appliance is for domestic use only.
9. Do not use this appliance outdoor.
10. Never use any accessories or parts from others that ELBA does not specifically recommended.
11. The hot steam will erupt when the appliance is working. Do not stay close to the hot steam to avoid scalding. Do not place anything which is weak to hot surfaces on the appliance. Do not cover the hot steam hole with towel or any other things to prevent accident.
12. Please clean the surface heating plate before cooking to ensure good contact with the stainless steel pot.
13. When the appliance is working, do not take off the lid to avoid scalding.
14. When the appliance is working, do not touch on the stainless steel pot and the glass lid to avoid scalding.
15. When the cooking is finished, do no touch on the surface of the heating plate, because is still residue of heat.
16. During cooking or after cooking, do not let the power cord or any other thing touch the heating plate to avoid accident.
17. To avoid scalding, if you want to take off the lid during cooking, please press “Keep Warm/Cancel” key and wait until the water stop boiling, then you may take off the lid.
18. Do not cook without load or with overloaded food. Otherwise it will cause deformation of the pot and appliance.
19. The ceramic pot and lid are fragile. Handle them with care.
20. Press the button lightly to prevent damage the button.
21. The content of the food loaded in the pot should not be exceeding the level indicator on the pot. Otherwise it will cause damage and malfunction of the appliance.
22. Do not carry the appliance during operation.
23. Never immerse any part of the product body in water or any other liquids not rinse it under the tap. Use only a moist cloth to clean the exterior product body.
24. Should the product body become moist or wet, remove the plug from the wall outlet immediately.
25. This appliance is not intended for used by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliances by a person responsible for their safety.
26. Children should be supervised to ensure that they do not play with the appliance.
27. Close supervision is necessary when your appliance is being used near children or infirm persons.
28. Save these instructions for future reference.


SAFETY INSTRUCTION FOR USING THIS ELECTRIC STEW POT

1. Water level must be filled above the MIN line and below the MAX line.
2. Always power off before removing the inner pot.
3. Always ensure that the ceramic lid and glass lid are properly closed.
4. Make sure the inner of the stew pot is dry before placing the stainless steel pot and before operating the appliance.
5. If there is a power failure, please reset the program after restoring power.
6. The ceramic pot and its lid will be hot during and after cooking. Please be caution and handle with protective gloves when removing.

PRODUCT DESCRIPTION (MODEL: ESP-E3050C(WH) & ESP-E4050C(WH))

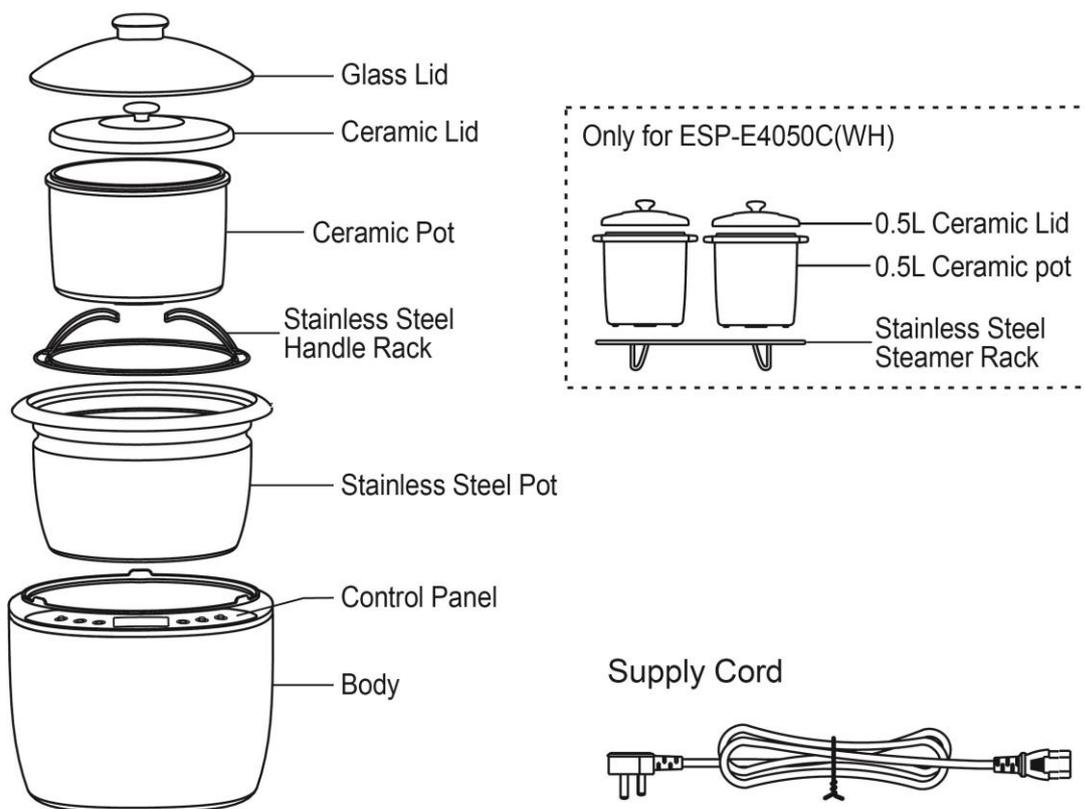

CONTROL PANEL

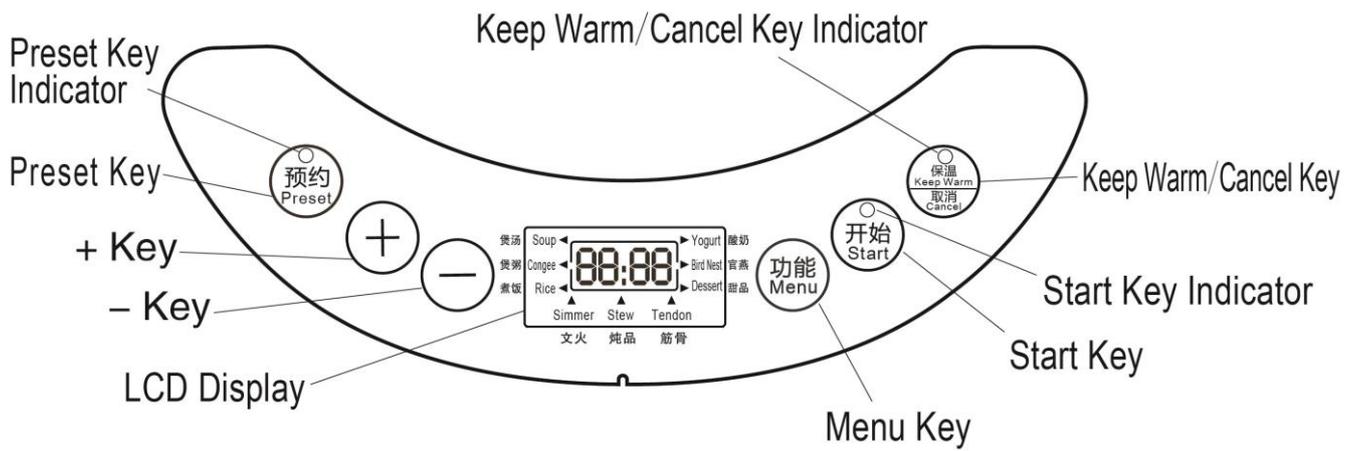

OPERATING THE APPLIANCE

1. Plug in the supply cord, the appliance will enter into standby mode.
2. Make sure the inner bottom of the appliance is dry.
3. Wipe up the outer surface of stainless steel pot and the heating plate.
4. Place the stainless steel pot into the appliance. (Turn around the stainless steel pot for 2 or 3 times to ensure proper contacts with the heating plate.)
5. Warning: Please do not power on the appliance with an empty pot as this will cause damage and deformation to the stainless steel pot.
6. Fill up the water into the stainless steel pot until it is filled above the MIN line and below the MAX line.
7. **Ceramic pot:** Fit the stainless steel handle rack below the ceramic pot. Place the ceramic pot into the stainless steel pot filled with water.
8. **2 sets of 0.5L ceramic pots (Only for model: ESP-E4050C(WH)):** Place the stainless steamer rack into the stainless steel pot, position the ceramic pots on the stainless steel steamer rack securely.
9. Ensure that the ceramic lid and glass lid are properly closed.
10. Power on the appliance and you will hear a “beeping” sound. The display screen will show “00:00”. The display screen will show different functions when the power is turned on.
11. Press the “Menu” key repeatedly to select desired cooking functions.
12. Once the cooking function is selected, the display screen will show the default operating timer. After setting the desired cooking function, press “Start” to start cooking.
13. To cancel any of the selected cooking function, press the “Cancel” key.
14. After the cooking has finished, power off and unplug the appliance.

OPERATING THE APPLIANCE

(Function Mode: Soup, Congee, Rice, Simmer, Stew, Tendon, Dessert, Bird Nest, Yogurt)

Stew, Bird Nest Function

1. Pour your ingredients and sufficient water into the ceramic pot and cover the glass lid. (Note: The water should cover the ingredients, but fill no more than 80% of ceramic pot)
2. Pour water into the stainless steel pot not more than Max water line.
3. Press “Menu” key to select the “Stew” or “Bird Nest” function. On the LCD display “◀” will point

to the selected function. The selected function “ ◀ ” and the default time will flash.

4. Press “+” or “-” key to increase or reduce the desired cooking time. Press the “Start” key to start the cooking function.
5. When the cooking cycle of the selected function has ended, the buzzer will ring 3 times and the display screen will show 12:00, the “Keep Warm” indicator will turn on, which is showing the program enters into keep warm status.
6. After the keep warm program has ended, the buzzer will ring 5 times. All indicators will turn off, and the LCD display will show 00:00, which is showing the program enters into standby status.

Yogurt Function

1. Pour the mixed milk (milk + leavening) into the ceramic pot, cover the glass lid.
2. Pour water into the stainless steel pot not more than the MAX water level.
3. Press “Menu” key to select the “Yogurt” function, on the LCD display “ ◀ ” will point to the selected function. The selected function “ ◀ ” and the default time will flash.
7. Press “+” or “-” key to increase or reduce the desired cooking time. Press the “Start” key to start the cooking function.
4. When the cooking cycle of the selected function has ended, the buzzer will ring 3 times and the display screen will show 00:00, which is showing the program enters into standby status.

Reminder:

- Sterilize the ceramic pot and lid in boiling water before making the yogurt.
- After the yogurt program has ended, the yogurt will become milk white or light yellow colour, scented, condensate and fine, without air bubbles. Recommend to eat immediately or stored in refrigeration to have better effect.

Soup, Congee, Rice, Simmer, Tendon, Dessert Function

1. Pour the ingredients into the stainless steel pot, pour appropriate water into the stainless steel pot in proportion, the water level should be between the MIN and MAX water level, and cover the glass lid.
2. Press “Menu” key to select the desired function, on the LCD display “ ◀ ” will point to the selected function. The selected function “ ◀ ” and the default time will flash.
8. Press “+” or “-” key to increase or reduce the desired cooking time. Press the “Start” key to start the cooking function.
3. When the cooking cycle of the selected function has ended, the buzzer will ring 3 times and the display screen will show 12:00, the “Keep Warm” indicator will turn on, which is showing the program enters into keep warm status.
4. After the keep warm program has ended, the buzzer will ring 5 times. All indicators will turn off, and the LCD display will show 00:00, which is showing the program enters into standby status.

Reminder:

- The “Rice” function is automatic, the cooking time cannot be adjusted.
- If you do not press the “Start” key within 1 minute after selected the function, the LCD display will show 00:00, which is showing the program enters into standby status.
- To ensure the rice is much soft and taste good, please wait for 10 minutes after the program enters into the keep warm status.

Keep Warm / Cancel Function

1. Press the “Keep Warm / Cancel” key and the keep warm indicator will turn on. The display screen will show 12:00. Press “+” or “-” key to increase or reduce the keep warm time.
2. When the appliance is operating, press “Keep Warm / Cancel” key two times, the appliance will

stop working and enters into standby status. Then, power off and unplug the appliance.

Reminder:

- Perishable food should not be kept warm for prolong period.

OPERATING THE APPLIANCE – (TIMER MODE)

Automatic Start Function (Preset Timer)

- This function is available for all functions except “Yogurt” & “Keep Warm / Cancel” mode.
- Press “Preset” key after selecting the desired cooking function, while the functions on the display screen is still flashing, press the “+” or “-” key to increase or reduce the desired starting time. When the “Preset” key is pressed, the display screen will flash and show “00:00” (minutes). Press the “+” or “-” key and select between the range of 30 minutes to 12 hours. The timer can be adjusted at the interval of 30 minutes each time the key is pressed. After setting the timer, press “Start”.

Cooking Time Table

Function	Default Time	Timer Adjustable Range	Preset Timer Adjustable Range
Soup	01:00	00:10 ~ 02:00	00:00 ~ 12:00
Congee	02:00	00:10 ~ 02:30	
Rice	--:--	Auto, not adjustable	
Simmer	01:40	00:10 ~ 02:30	
Stew	01:10	00:10 ~ 02:00	
Tendon	01:20	00:10 ~ 02:00	
Dessert	01:00	00:10 ~ 02:00	
Bird Nest	00:40	00:10 ~ 01:30	
Yogurt	09:00	08:00 ~ 12:00	
Keep Warm	12:00	00:10 ~ 12:00	-

Troubleshooting

No.	Problem	Causes	Solutions
1	The appliance not working	The plug and socket are not plug in tightly	Plug in the plug and socket tightly.
		Malfunction	Contact with our service center.
2	Smell or odor	There is something between the stainless steel body and heating plate	Unplug the appliance from the electrical outlet, clean the object and restart the appliance.
		Pour much or less water	Pour the water according to the minimum and maximum line.

- Do not repair or attempt to repair the appliance by non-qualified technician. Please contact the authorized after-sales service center for repair.
- If the power cord is damaged, please replace it from the authorized after-sales service center.
- The ceramic pots are fragile, it is not cover under warranty, please handle them carefully.

Care & Cleaning

1. Disconnected the appliance from the electrical outlet, and let it cool before cleaning.
2. Do not immerse the product, electric part in water or other liquids.
3. Cleaning the product with a damp soft cloth. Do not use any corrosive detergent.
4. The racks, pots and lids should be washed with detergent and sponge. Do not use wire brush to as it will damage the appliance.



Caution

TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN APPLI-ANCE IS IN USE, ALWAYS USE OVEN MITTS.

Always use extreme care when removing hot container/ceramic from a hot boiler, Always use oven mitts when removing hot items.



You can help to protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

ELBA