

ELBA

WASHING DRYER COMBO

MODEL: EWDC-F0806IN(WH)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

For The Warranty Terms & Conditions, Please Refer To Warranty Certificate

We recommend that you read the instructions in this owner's manual carefully before using it for the best performance and to extend the lifespan of your appliance, as it will provide you with all the instructions you require to ensure its safe installation, use and maintenance.

1. SAFETY PRECAUTIONS

- To ensure your safety, all electric appliances should only be installed or serviced by qualified technician. If the supply cord is damaged, it must be replaced by the authorized service center or similarly qualified technician in order to avoid hazard.
- Do not place supply cord on the edge of table and counter, or near any heating appliance.
- In order to avoid electric shock, do not immerse supply cord, plug or other parts into water.
- Do not place the appliance near electric stove, heated oven or other heat source.
- In order to avoid burning or risk of fire, combustibles or flammable material (curtains, cloth, wallpaper and others) should be kept away from the appliance.
- When the appliance is not being used, everything should be removed from the drum.
- Accessible parts may become hazardous during use, please keep away from children.
- Disconnect the appliance from the power supply before cleaning or maintenance.
- When the appliance is faulty, please contact the authorized service center. Do not attempt to repair by yourself.
- Never use metal scouring pads or sharp scrapers which will damage the appliance surface or interior wall, leading to scratches of the enamel.
- In order to avoid hazard or electric shock, never put laundry exceeding the capacity.
- Please make sure the power has been switched off when the appliance is not in used.
- Unplug from the socket when you are planning not to use the appliance for long time.

2. ATTENTIONS

- In order to avoid electric shock, please make sure the appliance has been shut off before carrying out the maintenance.
- Use only original accessories provided by ELBA or its authorized service center.
- Do not use wet parts of the body to touch the appliance.
- Do not pull the appliance by its supply cord.
- The appliance should not be exposed to rain or direct sunshine.
- Do not use or store flammable objects near to the appliance.
- Always pull out the plug and cut off the water supply after the operation.
- Check the water inside the appliance has been drained before opening its door. Do not open the door if there is water visible.
- The appliance shall not be installed in bath room or wet rooms.
- Do not refill the water manually by hand while washing.
- After the washing cycle is completed, please wait for three minutes to open the door.

Distributors decline all liability for not following above instructions or some improper operations which caused personal injury and property loss.

3. INSTALLATION

3.1 Before the installation


- Please check the products and make sure there is no damage on the appliance.
- The appliance door is level, and you can open and close the appliance door flexibly.
- Specification on the marking plate is in compliance with the regulations.
- If the appliance appears in an abnormal way, do not install and unplug the power supply before contacting the authorized service center.
- Do not attempt to repair or service the appliance by yourself. Repair or maintenance should only be carried out by a qualified technician or the authorized service center.
- This appliance must be installed only by qualified technician or the authorized service center. Manufacturer declines all responsibility for improper installation, which may harm persons and cause damage to the property.
- The AC power supply should be supplied with 220-240V, 50/60Hz with minimum 13A distribution circuit fuse or circuit breaker.

3.2 Installation of the appliance

The material of the surroundings should be insulated, and the clearance between the edge of the cabinet and the appliance should be over 100mm for ventilation.


Remove the transport bolts

- Before using the appliance, transport bolts must be removed from the rear of the appliance.
- Loosen all bolts with a spanner and remove them.
- Stop the holes with transportation hole plugs.
- Keep the transport bolts properly for future use.

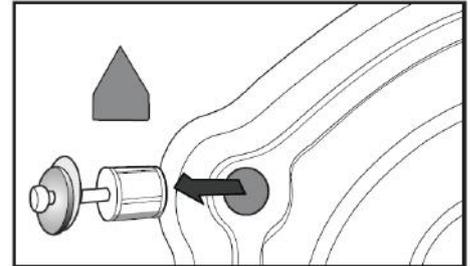


Adjust the bottom legs



- When positioning the appliance, check if the legs are closely attached to the appliance. Otherwise, please turn using hand or spanner and tighten the nuts with spanner. Make sure the appliance is in level with the ground and not move around when pressed on top.

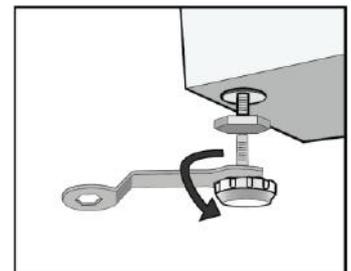

Connect the inlet and outlet pipe



- Connect the elbow to tap and fasten it clockwise.
- Connect the other end of inlet pipe to the inlet valve at the rear of the appliance and fasten the pipe tightly clockwise.
- Position the pipe as shown in the figure.

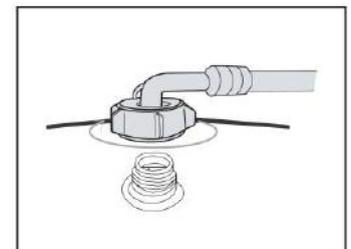

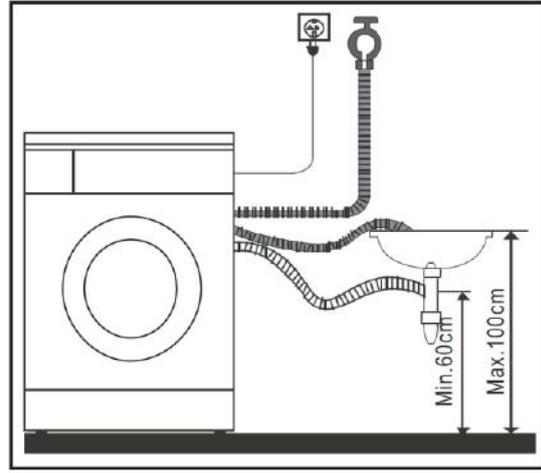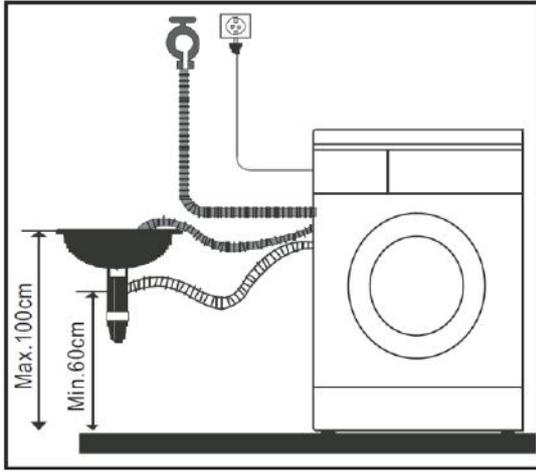


It can drain the water up and down, outlet hose shall not be installed at a height beyond 100cm and its end shall not be immersed in water.

4. PRODUCT DESCRIPTION

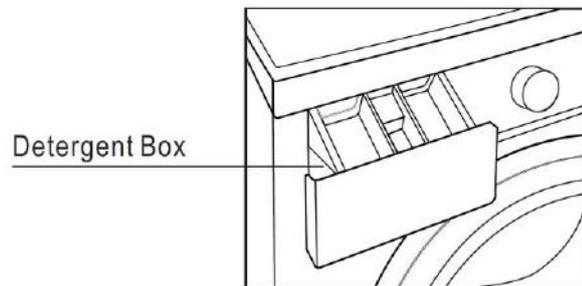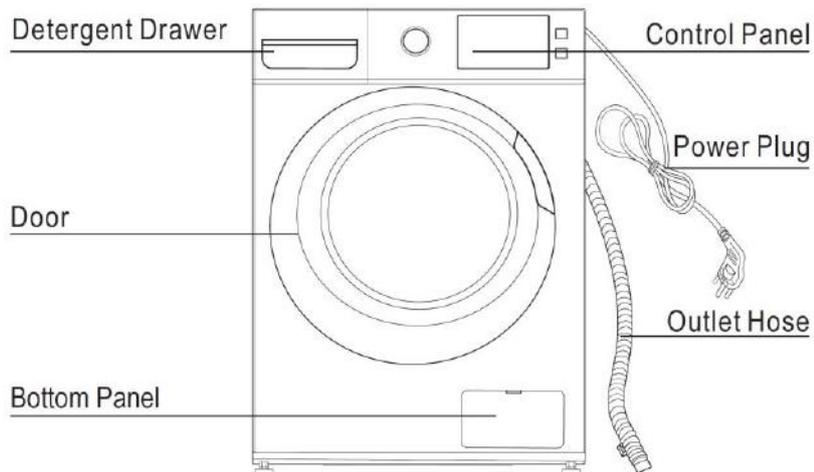

5. ACCESSORIES

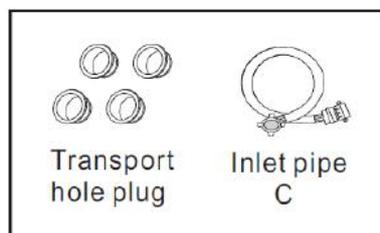

6. HOW TO USE YOUR WASHING MACHINE

Detergents

- “Low suds” detergent or washing powder shall be selected according to fibre type, colors, washing temperatures, dirty degree and types.
- Bleacher belongs to alkaline type can damage clothes.
- Powder detergents can easily leave the residues in the clothes so as to generate the bad smell; hence they shall be sufficiently rinsed.
- Detergent cannot easily get dissolved completely if there is excessive or water temperature is low. It can remain in clothes and pipes to pollute the clothes.
- Washing shall follow the weight of clothes, dirtiness, local water hardness as well as the recommendations from the detergent manufacturers.
- Keep detergents and additives in safe and dry places out of reach of children kids.

Care on the garment

- Please check the pockets of the clothes to be washed, empty the rigid items such as decorations and coins, otherwise the appliance may be damaged.
- The clothes to be washed are classified into cotton, blended fibre, synthetic fibre, silk, wool and artificial fiber. Follow the symbol type and make sure the clothes are suitable to wash in the washing machine.
- White and colorful garments shall be identified. All new colorful articles shall be washed in a separate way.
- The articles of different sizes are washed together to increase the washing effects.
- Soft articles shall be washed separately. As for new pure wool textiles, curtains and silks, the soft washing procedure shall be selected. Check the labels in all washing articles.
- The clothes shall be sorted before being put into washing machine. As for the curtains with hooks, the hooks shall be removed before being washed.
- The decorations on the clothes may damage the washing machine. As for the clothes with buttons or embroideries, they shall be turned over before being washed.
- Zips shall be zipped close and buttons or hooks shall be fixed. The loose band or ribbon shall be bound together.


Confirm the washing capacity

- Do not put excessive load into the washing machine. It may affect the washing effects.
- Please confirm the maximum affordable washing quantity according to the following:

| Fiber Type | Maximum Loading Capacity |
|------------|--------------------------|
| | 8.0kg |
| Cotton | 8.0kg |
| Synthetic | 4.0kg |
| Wool | 2.0kg |

- Washing machine shall not wash water-proof materials (ski suits, napkin pads, curtains).
- Do not wash the fiber products that water cannot get soaked easily into such as water-proof cushions and clothes. Otherwise there will be water bursting out or abnormal vibration to cause danger and that the clothes also may be damaged. (Such as outside napkin pads, raincoats, umbrella, ski suits, car covers, sleeping sacks etc.)

Quick Start Guide

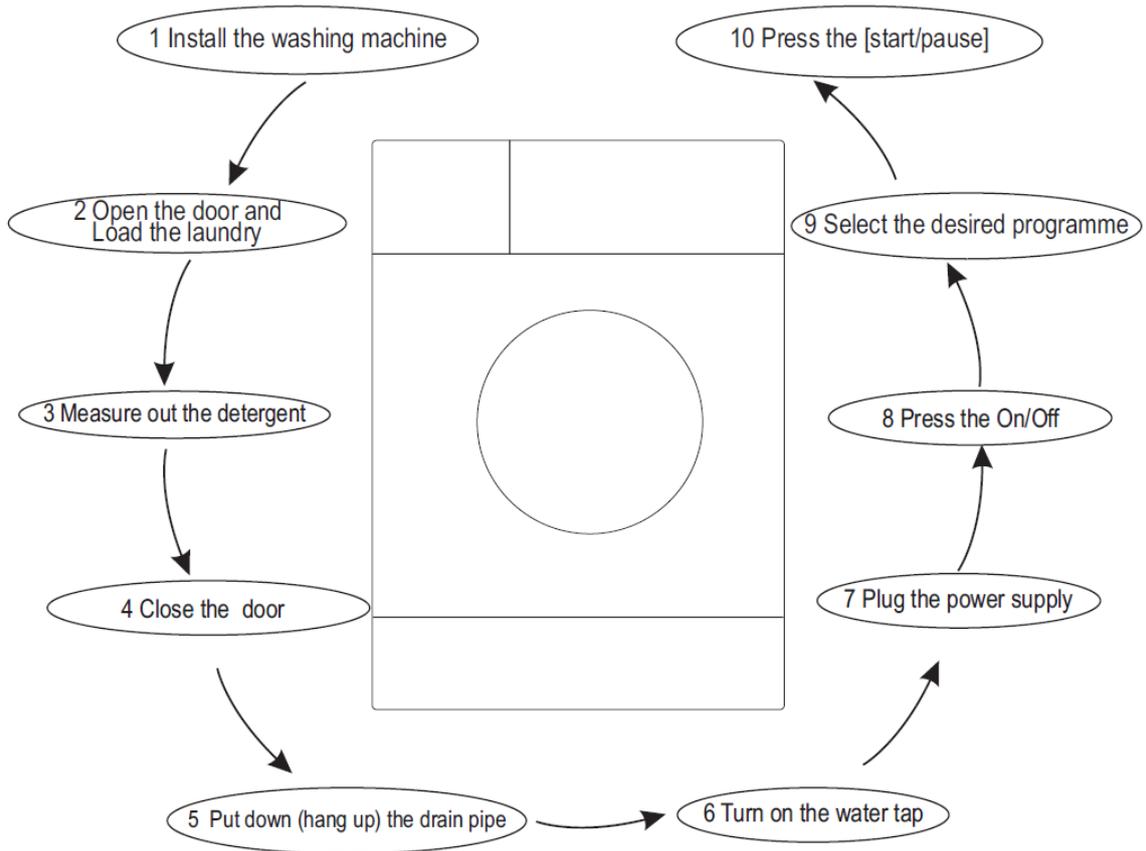


After the washing program completed:

1. The buzzer will beep to notify user the laundry had been completed.
2. Close the water tap.
3. Turn off the washing machine and disconnect the power plug.

7. PROGRAMME AND FUNCTIONS

View of Control Panel

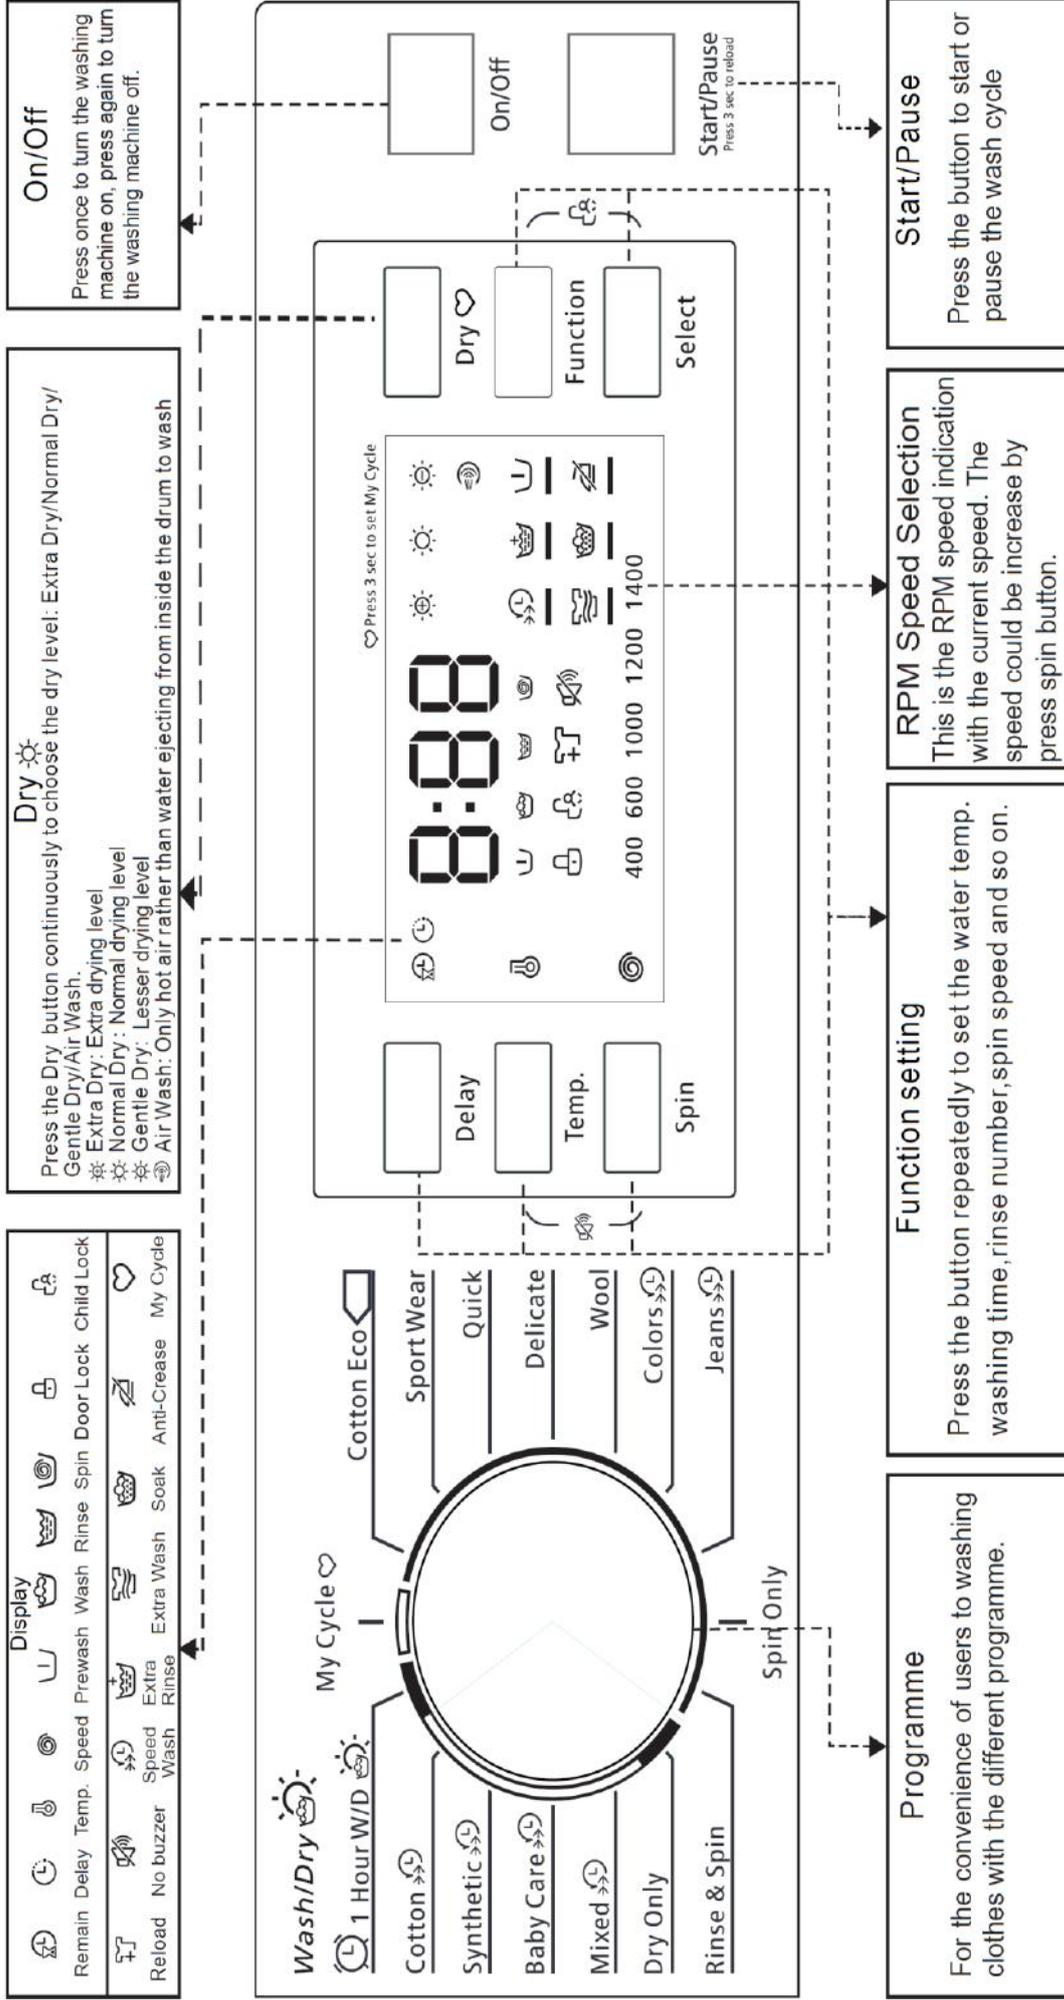


Note:

When the spin indicator lights (600,800,1000,1200,1400) are off means no spinning.

Washing Clothes for the First Time

- Before washing clothes at first time, the washing machine shall be operated in one round of the whole procedures without clothes in as follows:
 1. Connect power source and water.
 2. Put a little detergent into the box and close it.
 3. Press the button "On/Off".
 4. Press the button "Start/Pause".
 5. The drawer is separated as follows:
 - I : Pre-detergent for prewash.
 - II: Main detergent for main wash
 - : washing additive, such as fabric softener.

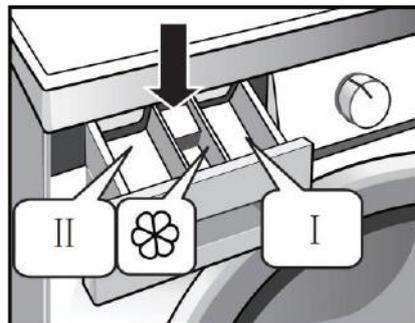

Put detergent into washing machine.

1. Pull out the drawer.
2. Fill pre-detergent into Case I (when prewash function is selected).
3. Fill detergent into Case II.
4. Fill softener into Case  (when necessary).

Notes:

Before detergents are poured into the detergent box, it is suggested to use some water for dilution to prevent the inlet of detergent box from being blocked and overflowing while filling water. Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.

Selecting the Program

The proper washing program shall be selected according to the types, quantities, and dirtiness of the clothes to be washed in combination with the following washing temperature table.

| | |
|------------------------------|---|
| 90°C | Seriously besmirched, pure white cotton or flax (for example: coffee table cloths, canteen table cloths, towels, bed sheets) |
| 60°C | Moderately besmirched, colorful flax, cotton and synthetic articles with certain decolorizing degree (for example: shirts, night pajamas; Slightly besmirched, pure white flax) |
| 40°C, 30°C, 20°C, Cold Water | Normally besmirched articles (40°C ,30°C, for example: synthetic and wool) |

- Turn the rotary switch to select the corresponding procedures according to the types of textiles.
- Select the proper temperature according to the dirtiness. Generally, the higher the temperature is, the more the power is consumed.
- Select the proper spinning speed required. The higher the spinning speed is, the drier the textiles are spun, but higher the noises will also be increased.
- The surfaces of delicate textiles will have wrinkles and the working life of washing machine will be shortened.
- To protect the clothes, the lower spinning speed shall be selected for delicate textiles. The main washing procedures depend on the types of the clothes to be washed as follows:

1Hour W/D

For small synthetic clothes or shirts, load limitation is 1 kg. Please select this program when you need a quick washing and drying program with limited loading laundry. Time duration is only 1 hour including wash and dry. Laundry such as towels or jeans is not suitable for this program, they will enlarge the time duration and affect the moisture content.

Cotton

You can select this procedure to wash the daily washable clothes. The washing period is longer with strong washing intensions. It is recommended to wash the daily cotton articles, for example: daily laundry, bed sheets, quilt covers, pillowcases, gowns, underwear etc.

Cotton ECO

To increase the washing effects using lower temperature but washing time will be increased. It is recommended to wash the clothes for babies or worn by the persons with allergic skin.

Jeans

This program is specially designed for washing jeans.

Colors

You can choose the program to wash brightly colored articles. It can protect the bright colors better and reduce color fading.

Quick

This procedure is suitable for washing few and not very dirty clothes in short time.

Rinse & Spin

This function is to rinse & spin separately.

Spin Only

This function is to spin only. Soap water or rinse water shall be drained out before spinning.

Dry Only

This function is to dry the clothes. Please select the drying time according to the loading.

Wool

You can select this procedure to wash the wool textiles labeled with "Machine Wash". Please select the proper washing temperature according to the label on the articles to be washed. A proper detergent shall be selected for wool textiles.

Delicate

You can select this procedure to wash your delicate clothes. Its washing intension is gentler and spinning speed is less compared with the procedure "Synthetic". It is recommended for the articles to be washed softly.

Mixed

You can select this procedure wash the tough clothes that need much more time and strength. It is used for the daily clothes for cotton, such as sheets, chained, pillowcases bathrobe and underwear.

Synthetic

You can select this procedure to wash the delicate clothes. The procedure is shorter compared with cottons and the washing intensity is quite gentle. It is recommended to wash articles, for example: shirts, coats, blouses. As for curtains and laced textiles, the procedure "Synthetic" shall be selected. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.

Sports Wear

You can select this procedure to wash the sports attire.

Baby Care

Baby care procedure with an extra rinse, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin from allergy.

The Auxiliary Functions can be selected as follows:

Prewash

This function is to perform an extra wash cycle before the main wash. For heavily soiled clothes which require an extra washing cycle. In this function, the detergent is required to be put in the prewash compartment.

Speed wash

The function can decrease the washing time.

Extra rinse

The laundry will undergo an extra rinse cycle once complete washing.

Soak

When water reaches the target level, soak for 20 minutes and then the motor does not rotate.

Anti-crease

Anti-crease function can be used to reduce the wrinkles of clothes.

Delay

Delay start function can be set with this button, the delaying time is 0-24H.

To set the delay start function:

1. Select a program;
2. Press the Delay button to choose the duration of delay;
3. Press Start/Pause to commence the Delay operation.

To cancel the delay function:

Press the Delay button until the display shows 0H. It should be pressed before starting the program. If the program has been started, press the On/Off button to reset the delay time.

Notes: If there is any breakdown in the power supply while the machine is operating, a memory will store the selected program and when the power is resumed, press the Start/Pause button and the remaining time continues.

Reload

This operation can be executed during the washing procedure. When the drum of the washing machine is still rolling and there is large amount of water with high temperature in the drum, it is unsafe and the door cannot be opened forcefully. To open, press Start/Pause button for 3 seconds to reload, and add the clothes into the washing machine.

To add more garment:

1. Wait until the drum stops rotation.
2. The door switch is unlocked.
3. Close the door when the clothes needs are loaded and repress the Start/Pause button.

Notes: Don't use the Reload function when the water surface over the edge of the inner tub and the temperature is higher.

Lock Protection for Kids

This function is to lock the washing program to prevent misused by children. In this case, all buttons except On/Off button will not work.

Press Temperature and Spin button together for 3 seconds during the running procedure, the buzzer will beep and the machine will be locked. Press the two buttons for 3 seconds together and buzzer will beep to release.

Note: Cutting off the main power supply will remove the lock protection function. The lock protection will not be cancelled after all procedures are completed.

Bubble Check Function

Excessive bubbles will occur when there is excessive detergent which will affect washing and rinse cycle. This function will automatically check the bubble density and remove the excessive bubbles.

Table of Washing and Drying Program

| Program Description | Load(kg) | Detergent Box | | | Delay | Speed Wash | Extra Rinse | Prewash | Extra Wash | Soak | Anti-Crease | Default Temp. (°C) | Default Time | | Default Speed (RPM) |
|---------------------|----------|---------------|---------|---------------|-------|------------|-------------|---------|------------|------|-------------|--------------------|--------------|--|---------------------|
| | | Case I | Case II | Softener Case | | | | | | | | | 8.0kg | | |
| Cotton ECO | 8.0 | X | ● | ○ | ○ | X | X | X | X | X | X | 60 | 4:50 | | 1400 |
| Sportwear | 4.0 | ○ | ● | ○ | ○ | X | ○ | ○ | ○ | ○ | ○ | 40 | 0:45 | | 1200 |
| Quick | 2.0 | X | ● | ○ | ○ | X | X | X | X | X | X | Cold | 0:15 | | 800 |
| Delicate | 2.5 | X | ● | ○ | ○ | X | ○ | X | X | X | ○ | 30 | 0:50 | | 600 |
| Wool | 2.0 | X | ● | ○ | ○ | X | ○ | X | X | X | ○ | 40 | 1:07 | | 600 |
| Colors | 4.0 | X | ● | ○ | ○ | ○ | ○ | X | X | ○ | ○ | Cold | 1:10 | | 1000 |
| Jeans | 8.0 | ○ | ● | ○ | ○ | ○ | ○ | X | X | ○ | ○ | 60 | 1:45 | | 800 |
| Spin Only | 8.0 | X | X | X | ○ | X | X | X | X | X | ○ | - | 0:12 | | 1000 |
| Rinse&Spin | 8.0 | X | X | ○ | ○ | X | ○ | X | X | X | ○ | - | 0:20 | | 1000 |
| Dry Only | 6.0 | X | X | X | ○ | X | X | X | X | X | X | - | 3:32 | | 1400 |
| Mixed | 8.0 | ○ | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | 40 | 1:13 | | 800 |
| Baby Care | 8.0 | ○ | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | 30 | 1:20 | | 800 |
| Synthetic | 4.0 | ○ | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | 40 | 1:40 | | 800 |
| Cotton | 8.0 | ○ | ● | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | 40 | 2:40 | | 800 |
| 1 Hour W/D | 1.0 | X | ● | ○ | ○ | X | X | X | X | X | X | Cold | 0:59 | | 1400 |

● Means must ○ Means optional X Means not necessary

Notes: The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.


8. CLEANING AND MAINTENANCE

Before cleaning or performing maintenance on your appliance, disconnect the appliance from the power supply. To extend the lifespan of your appliance, it must be cleaned frequently.

The enamel or stainless steel parts should be cleaned without using any abrasive powders or corrosive substances which could damage the surface. If the stains are difficult to be removed, use mild cleaner to clean the area.

Cleaning the Detergent Box



1. Press down the arrow location on softener cover inside the drawer.
2. Lift the clip up and take out softener cover and wash the softener cover with water.
3. Restore the softener cover and push the drawer into position.

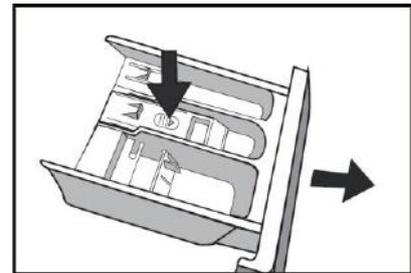

Cleaning the Inlet Filter



Inlet filter must be cleaned regularly if there is insufficient water.

1. Close the tap.
2. Select any procedure except "Wash" or "Drain" procedure.
3. Press the button "Start/Pause" and keep the procedure running for about 40 seconds.
4. Remove the inlet pipe from the tap.
5. Use water to wash the filter.
6. Reconnect the inlet pipe.

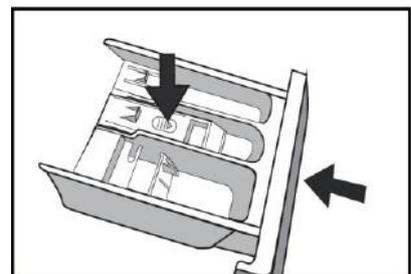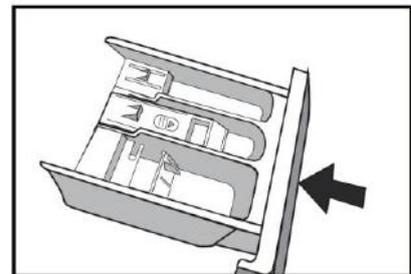

Washing the filter externally:

1. Screw off the inlet pipe from the backside of the machine.
2. Pull out the filter with long tip pliers and reinstall it back after being washed.
3. Reconnect the inlet pipe.
4. Open the tap and make sure there is no water leakage.
5. Close the tap.

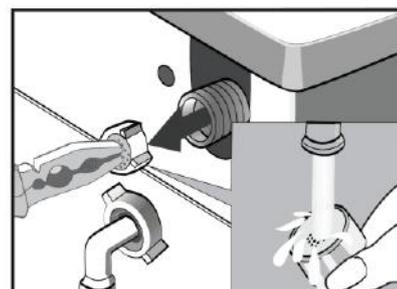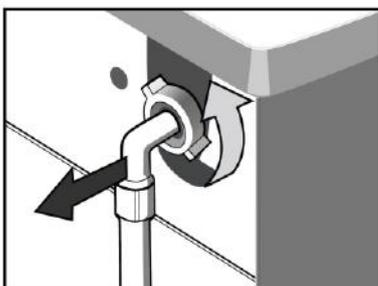


Drain Pump Filter


- Drain pump filter can filter the yarns and small foreign matters from the washings. Clean the filter periodically to ensure the normal operation of washing machine.
- First, drain the water with drain pump and then open the drain pump to clean away foreign matters from drain pump filter.
- Take care if the drained water is hot.

Cleaning the Pump


- According to the soil level within the cycles and the frequency of the cycles, you have to inspect and clean the filter regularly.
- The pump should be inspected if the machine does not empty and/or spin the machine makes an unusual noise during draining due to objects such as safety pins coins etc. blocking the pump.

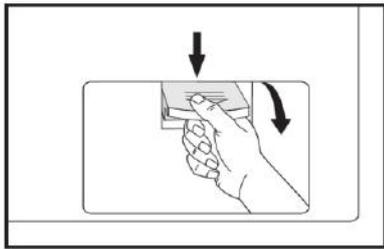

1. After the power is disconnected, use hand to open the filter cover.

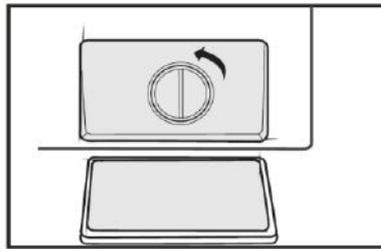

2. Turn the filter down as shown with the figure and take out sundries matters.

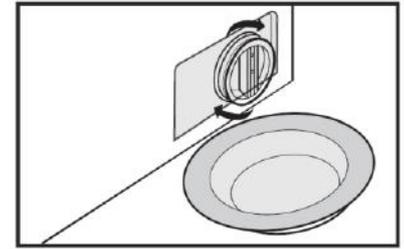

3. Reinstall each part back after sundries matters are removed.

- Disconnect the appliance.
- Wait until the remaining water has cooled down.
- Open the bottom panel. Place a container close to the appliance to collect any spillage.
- Unscrew the drain cover to remove all the dirt and blockage.
- Always get ready a cloth nearby to dry up spillage of water when removing the cover.
- Remove any objects from the pump filter by rotating it.
- After washing, restore the pump filter and screw the drain cover fully in.
- Close the bottom panel.

Warning!

When the appliance is in use and depending on the program selected there can be hot water in the pump. Never remove the drain cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the drain cover, ensure it is securely retightened so as to stop leaks and young children being able to remove it.

9. TROUBLESHOOTING

| Troubles | Reason | Solution |
|---|---|--|
| Appliance cannot start up | Door is not closed properly. No power supplied. No water supplied. Function not set. | Check if the door is closed tightly. Check if power plug is inserted well. Check if water supply tap is opened. Check if button "Start/Pause" is pressed. Check if button "On/Off" is pressed. |
| Door cannot be opened | Machine's safety protection is working. | Turn off the appliance and disconnect the power. |
| Heating faulty | Water temperature set to Cold or too low. NTC Sensor is damaged or heating pipe malfunctioned. | Select the proper washing temperature. Contact the service center for repair. |
| Water leakage | The connection between inlet pipe or outlet hose and tap or washing machine is not tight. Drain pipe in the room is blocked. | Check and fasten water pipes connection. Clean up outlet hose and ask a specialized person for repair when necessary. Make sure the height of the piping is properly adjusted. |
| Water overflowed from the bottom of the appliance | The inlet pipe is not connected firmly. Outlet hose has water leakage. | Fix the inlet pipe. Replace the drain hose. |
| Indicator or display does not light. | Power is disconnected. PC board has problems. | Check if the power has turned on and power plug is connected correctly. Please contact service center for repair. |
| Detergent residues in the detergent compartment | Washing powder is dampened and agglomerated. | Clean and wipe the detergent compartment. Use liquid detergents or the detergents special for front loading washer. |
| Washing effects are not good | The clothes are too dirty. Insufficient detergent quantity. Wrong program chosen. | Select a proper washing program. Add the proper detergent quantity according to the instructions in detergent package. |
| Abnormal noise and vibration | Transportation bolt not removed. Legs under the appliance have not adjusted in level. | Check if the fixing (bolts) has been removed. Check if the appliance is installed on the solid and level floor. Check if the legs in the washing machine are adjusted level. |

Error Code

| Display LED | Description | Reason | Solution |
|-------------|---------------------------------------|--|---|
| E30 | Door lock problem | Door is not closed properly. | Restart after the door is closed. |
| | | Please call up service line if there are still troubles. | |
| E10 | Water injecting problem while washing | Tap is not opened or water flows too slowly. Inlet valve filter is blocked. Inlet pipe is twisted. If water is not supplied | Open the tap or wait till the water supply becomes normal. Check inlet valve filter. Straighten the water pipe Check the other taps in the room. |
| | | Please call up service line if there are still troubles. | |
| E21 | Drain problem while washing | Outlet hose is blocked or twisted Drain pump is blocked | Wash and straighten outlet hose. Wash drain pump filter |
| | | Please call up service line if there are still troubles. | |

Care Label

| | | | | | |
|--|---|--|---|--|--|
| <p>Normal wash</p>  <p>Gentle wash</p>  | <p>40</p> <p>Warm wash (max 40°C)</p>  | <p>Hand wash</p>  <p>Do not wash</p>  | <p>Bleach</p>  <p>Do not bleach</p>  | <p>Chlorine bleach may be used</p>  <p>Chlorine bleach not be used</p>  | <p>Tumble dry, Medium (max 150°C)</p>  <p>Tumble dry, Low heat (max 110°C)</p>  |
| <p>Iron</p>  <p>Do not iron</p>  | <p>Cool iron(max 110°C)</p>  <p>Warm iron,medium (max 150°C)</p>  | <p>Dry clean</p>  <p>Do not dry clean</p>  | <p>Dry clean normal cycle with any solvent</p>  <p>Dry clean normal cycle petroleum solvent only</p>  | <p>Tumble dry normal</p>  <p>Dry flat</p>  | <p>Drip dry</p>  <p>Hang to dry /Line dry</p>  |
| <p>Iron with cloth</p>  <p>Steam Iron</p>  | <p>Dry after wash</p>  <p>Line Dry in shade</p>  | <p>Warmly dry clean</p>  <p>Do not tumble dry</p>  | <p>Line Dry</p>  | <p>No Wring</p>  | <p>No machine wash</p>  |

Electrical Warning

- To avoid fire, electrical shock and other accidents, please take note on the following:
 - i. Only the voltage indicated in power label can be used.
 - ii. When you are using the heating function, the maximum current through the washing dryer combo machine will reach 10A. Therefore, please make sure the power supply units (current, voltage and cable) can meet the normal load requirements for the machine.
 - iii. Protect the power cord properly. Power cord shall be fixed well so that it will not trip the people or other things and be damaged. Special attention shall be paid to the socket. It shall be plugged into the sockets completely and attention shall be paid to the plug location.
 - iv. Do not make the wall-mounted socket overloaded or cable extended. Overloading of the wiring may cause fire or electrical shock. Do not pull out power plug with wet hand.
 - v. To ensure your safety, power plug shall be inserted into an earthed three-pole socket. Carefully check and ensure that your socket is properly earthed.

10. TECHNICAL SPECIFICATION

| | |
|------------------------|-----------------------------|
| Model | EWDC-F0806IN(WH) |
| Washing Capacity | 8.0KG |
| Drying Capacity | 6.0KG |
| Voltage | 220–240V |
| Frequency | 50/60Hz |
| Rated Power | 1,900W |
| Rated Current | 10A |
| Water Pressure | 0.05MPa ~ 1.0 MPa |
| Product Dimension (mm) | 595 (W) x 850 (H) x 470 (D) |
| Carton Dimension (mm) | 680 (W) x 875 (H) x 605 (D) |
| Net / Gross Weight | 64 KGS / 68 KGS |

NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmental friendly and healthy way.



ELBA