



# ELBA

## **GAS STOVE**

**MODEL: EGS-F7132(SS)  
EGS-F7192(SS)**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

 
See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate**


Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.

## SAFETY PRECAUTIONS

1. Keep the appliances out of reach from children. Do not let them to operate the appliances without supervision.
2. This product is for household and indoor use only.
3. This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
4. If the gas hose, hose clamp and regulator are damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.
5. There must be adequate air ventilation of the room when the product is used.
6. This appliances must be stationed at least 15cm away from other objects. There should be 100cm space between it and anything on the top. This appliances should be at least 50cm away from gas cylinder.
7. There is a risk of fire if cleaning is not carried out in accordance with this instruction.
8. Do not touch the gas stove surface during or after cooking with bare hand.
9. Before maintenance or cleaning, switch off the main gas valve and disconnect the gas stove from the gas cylinder. Please make sure there is no gas leakage before maintenance or cleaning.
10. Do not store or place flammable liquids or items in the vicinity of this gas stove.
11. Always switch off the gas when not in use, before assembling or disassembling parts.
12. **Caution: Use only low pressure regulator for this appliance.**

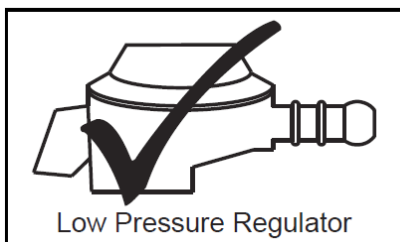


## DESCRIPTION OF THE GAS STOVE

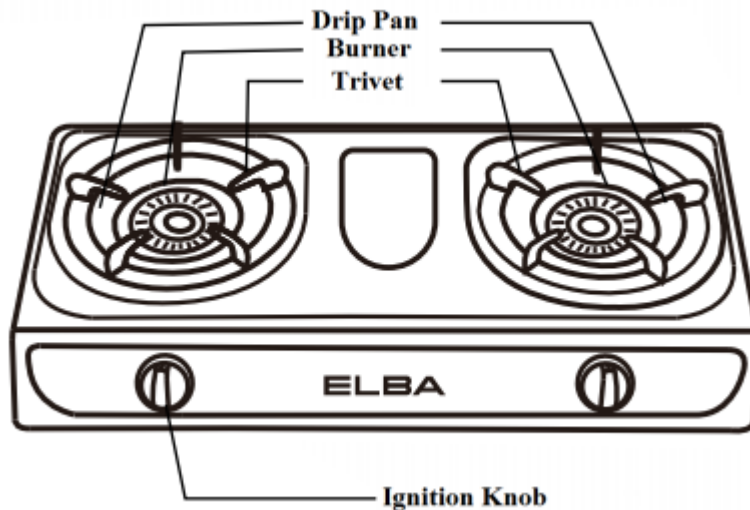 


## INSTALLATION FOR USE

 
1. Check the gas stove to ensure all parts are complete.
2. Using a screwdriver affix the rubber legs with screw provided into the designated hole on the bottom of the gas stove.

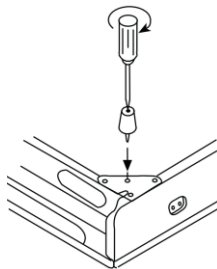

 
3. Connect the gas hose (not included) onto the inlet pipe.

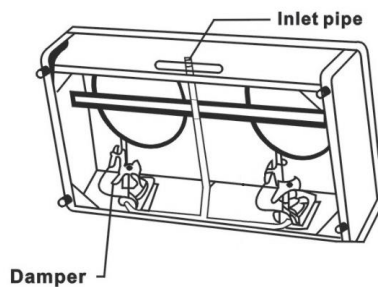

 - Using a screwdriver, secure the gas hose and inlet pipe by tighten the hose clamp.

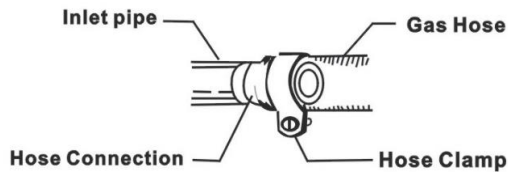


 - Place the trivet on top of the left and right burners.
- Open the main gas valve on the gas cylinder. If there is gas leakage detected, close the main gas valve immediately and open the windows to allow the gas to escape from the room.

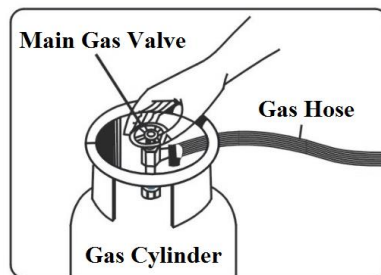

## INSTRUCTIONS FOR USE

 - Open the main gas valve and turn the ignition knob anti clockwise direction until the ignition click sound appear and flame is lighted.
- If the flame fails to ignite, turn the ignition knob back to “OFF” position and repeat the procedure as point 1.
- In order to obtain the best flame output, adjust the damper under the gas stove either clockwise or anti clockwise direction until the blue color flames are obtained.

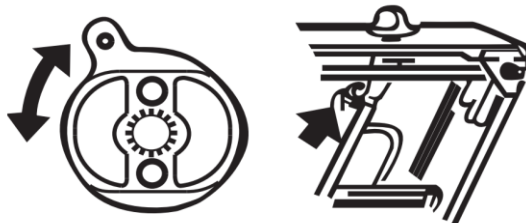

- Turn the ignition knob back to “OFF” position to turn off the gas stove.

## CLEANING AND MAINTENANCE

Clean the appliance with a damp cloth with mild cleaner. Do not use chemical, steel, wooden or abrasive cleaners to clean the appliance.

## TROUBLESHOOTING

Failure		Failure Reason	Possible Solution
Burner does not light		Gas source was not switched on	Turn on the gas source switch
		The gas pipe is leaking	Change a new pipe
		Gas depleted	Replace the gas cylinder
		Air in the gas pipe	Turn repeatedly to expel air
		Mispositioning of the ignition needle	Adjust the discharge distance to 3-4mm
Gas Leakage		Pipe aging and torn off	Change a new gas pipe
		Main fire cannot be lightened	Try again after the gas dispersed
		The gas valve not airtight	Change the valve
Exceptional Flame	Anomalous Flame	Gas burner not positioned correctly	Make sure the burner is positioned correctly
	Short Flame	Not enough gas pressure	Inspect the gas cylinder and the regulator
	Long and yellow flame	Too small intake	Adjust the air intake
	Asymmetrical Flame	The hole of the burner is jammed	Clean the burner

# MAIN SPECIFICATION

PRODUCT	GAS STOVE	
MODEL NO	EGS-F7132(SS)	
GAS CATEGORY	<input type="checkbox"/> I3B/P(30)	
TYPES OF GAS	G30, G31 OR THEIR MIXTURES/ LPG	
GAS PRESSURE	3000Pa	
TOTAL HEAT INPUT $\sum Q_n$	8.0 kW(582g/h)	
BURNER SIZE	(Left) 100mm	(Right) 100mm
GAS CONSUMPTION(kW)	4.0 kW(291g/h)	4.0 kW(291g/h)
COUNTRY OF DESTINATION	MALAYSIA	
<b>WARNING:</b> This appliance must be installed in accordance with the regulations in force and only used in a well ventilated space. Read the instructions before installing or using this appliance. Forbid to place on the surface of combustible objects.		

PRODUCT	GAS STOVE	
MODEL NO	EGS-F7192(SS)	
GAS CATEGORY	<input type="checkbox"/> I3B/P(30)	
TYPES OF GAS	G30, G31 OR THEIR MIXTURES/ LPG	
GAS PRESSURE	3000Pa	
TOTAL HEAT INPUT $\sum Q_n$	7.8 kW(568g/h)	
BURNER SIZE	(Left) 100mm	(Right) 100mm
GAS CONSUMPTION(kW)	3.9 kW(284g/h)	3.9 kW(284g/h)
COUNTRY OF DESTINATION	MALAYSIA	
<b>WARNING:</b> This appliance must be installed in accordance with the regulations in force and only used in a well ventilated space. Read the instructions before installing or using this appliance. Forbid to place on the surface of combustible objects.		



**ELBA**