

# ELBA

## COFFEE MAKER

**MODEL: ECM-F1895(BK)**

### Owner's Manual

Please read this manual carefully  
before operating your set.

Retain it for future reference.

Record model number and serial  
number of the set.

See the label attached on the set and  
quote this information to your dealer  
when you require service.


**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.**

## IMPORTANT SAFEGUARDS


When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. To protect against electric shock, do not immerse the appliance in water or any other liquids.
3. Do not operate the appliance with damaged power cord or plug, after the appliance malfunctioned, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized dealer or after-sales service center for examination, repair, electrical or mechanical adjustment.
4. Do not let the power cord hang over edge of table or counter or hot surface.
5. To disconnect the plug from wall outlet, grasp the plug and not the cord.
6. Do not leave the appliance unattended while it is operating.
7. Do not use a cracked glass jug or a glass jug with loose handle. Use the glass jug provided only with this appliance. Be careful while handling the glass jug as it is fragile.
8. Never leave the empty glass jug on the hotplate otherwise the glass jug is liable to crack.
9. Never place the hot glass jug on a wet or cold surface.
10. Never use this appliance without water fill up into the water tank.
11. Do not let all of the liquid evaporate in the glass jug when the appliance is on.
12. Always place the appliance on a flat and stable surface.
13. Scalding may occur if the top cover is removed during the brewing process. Always check the glass jug is placed on the warming plate correctly during the brewing.
14. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Do not place the appliance on a hot surface and do not let the cord contact with hot surfaces.
17. Never use any accessories or parts from other manufacturers or that ELBA does not specifically recommended. Using compatible parts can create hazard.
18. Do not clean the water tank with cleaners, steel wool pads, or any other abrasive materials.
19. Unplug the appliance before you clean it and if problem occur during brewing.
20. Unplug the appliance from wall outlet when not in use and before cleaning. Allow appliance to cool completely before putting on or taking off the parts.
21. Do not operate the appliance for other than its intended use.
22. This appliance is for domestic use only.
23. Do not use this appliance outdoors.
24. Save these instructions for future reference.

## PRODUCT DESCRIPTION

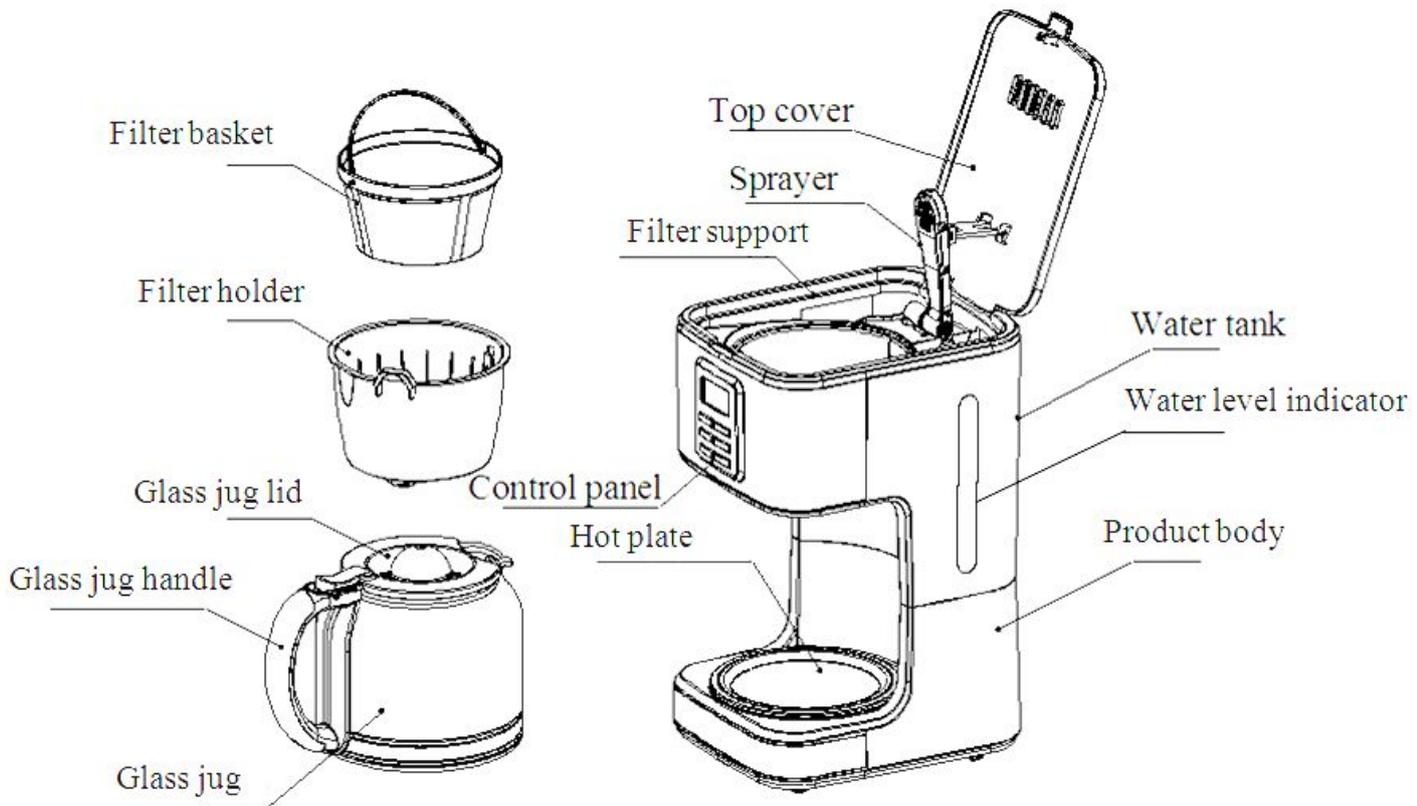

## CONTROL PANEL

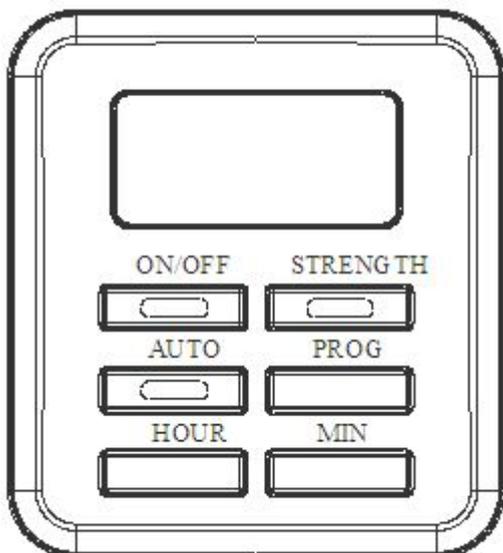

## USING THE COFFEE MAKER FOR THE FIRST TIME

1. Remove all packaging materials and make sure the appliance is received in good condition. Tear up and discard all plastic bags as they pose a risk to children.
2. Clean the glass jug and filter thoroughly with clean water. Wipe body clean with damp cloth.  
**Note:** Do not immerse the appliance, cord and plug in water or any others liquids.
3. Place the appliance on a flat and stable surface.
4. Connect the plug to the wall outlet.  
**Note:** Make sure the cord is not contact with hot surfaces.
5. Fill up the water tank with water up to the "MAX" marking (refer to the water level indicator), boil and discard the water for two times.

## OPERATING THE COFFEE MAKER

1. Open the water tank cover. Fill water into the water tank until the level indicator shows desired level.  
**Note:** Refer to the water level indicator for the maximum water level marking and never exceed the "MAX" mark.
2. Make sure the filter basket is inside the filter holder. You may use filter provided or line it with a store-bought paper filter. Add coffee ground into the filter. The standard recipe is one spoon of coffee ground for each cup of water, however, the amount of coffee ground can be adjusted to your taste and is dependent upon type of coffee, fines of grounds and flavor of coffee desired. Close the water tank cover.  
**Note:** Make sure that the filter basket is inserted properly onto the filter holder, otherwise the water tank cover cannot be closed securely.
3. Place the glass jug on the hotplate and make sure the lid of glass jug is fitted and pointed to the dripping hole.  
**WARNING:** Do not use a cracked glass jug or a glass jug with loose handle. Use the glass jug provided only with this appliance. Be careful while handling the glass jug as it is fragile.
4. Connect the plug into the wall outlet and turn on the appliance. The LCD will display "AM12:00" together with the ":" flickers.
5. Press ON/OFF button, its corresponding indicator illuminates and the appliance start operating.
6. If you want to brew espresso coffee, press "STRENGTH" button, its corresponding indicator turns on, and then press "ON/OFF" button once, at that time, both the indicators of "STRENGTH" and "ON/OFF" buttons illuminate. And the appliance starts to brew espresso coffee.
7. By pressing "AUTO" button once time, it available to set preset function to start brewing coffee at your desired time, to cancel the preset function, press the "ON/OFF" button, the indicator of "AUTO" will be extinguished.

8. The coffee will stop dripping when the glass jug is removed from pouring coffee by not exceed 30 seconds.
9. The glass jug can be removed at anytime for serving when the brewing process is done (about one minute after the coffee stops from dripping out).  
**Note:** The amount of coffee collected in the glass jug will be lesser than the water you add into the water tank, as some water is absorbed by the coffee ground. Do not contact the hotplate while the appliance is operating as it is very hot.
10. Do not move the appliance while in use or immediately after the brewing is complete.
11. For an optimum coffee taste serve it right after brewing. To keep coffee warm for serving later, let the appliance remain on after brewing. The appliance will shut off automatically after two hours from the "ON/OFF" button being activated if it has not been manually shut down after the completion brewing process.
12. Do not reheat the coffee.
13. Do not reuse the coffee ground.
14. Always switch off and unplug the plug from the wall outlet when not in use.  
**Caution:** Be careful when pouring out the coffee from the glass jug as the temperature is high right after brewing.

## PRE-SET FUNCTION

To start brew coffee at your desired tie, for example now it is 8:10 am, you hope that the coffee maker will automatically start at 1:00 pm, first follow steps 1 to 4 of above section, and then you can set the pre-set function as follows:



Fig.1

1. Press "PROG" button one time, the word "CLOCK" is showed at the up-right corner on display.
2. Press the "HR" and "MIN" button continuously to set the present time (real clock), that is AM 8:10 (See Fig. 1).

**NOTE:** The time cycle is 12 hours.



Fig.2

3. Press "PROG" button once again and the word "TIMER" shows on up-left corner of display.
4. Set the delayed starting time by pressing "HR" and "MIN" button repetitively, that is PM 01:00 (see Fig. 2).
5. Press "ON/OFF" button twice, press "AUTO" button once again and button illuminates. After a while, the LCD will display the current clock. After pre-set time started, "ON/OFF" button illuminates, you may see the automatic start time by pressing "PROG".  
**NOTE:** You may cancel the automatic start function by pressing "ON/OFF" button. If you want to change the automatic start time, only following the above 1-4 steps again.
6. When the time is due the indicator of "AUTO" button will turn off and the appliance starts brewing. The appliance will shut off automatically after two hours from the "ON/OFF" button being activated if it has not been manually shut down after completion brewing process.

## CLEANING AND MAINTENANCE

1. Unplug the appliance from wall outlet.
2. Allow the appliance to cool completely before cleaning.
3. Remove and clean the filter and glass jug after each use. Wash in warm, soapy water. Rinse well and dry thoroughly before returning to appliance.

**Caution:** To protect against electric shock, do not immerse the appliance in water or any other liquids.

4. Wipe the exterior of the product with a soft, damp cloth to remove stains.
5. Use a damp cloth and gently wipe the hotplate. Never use abrasive cleaner to clean it.
6. Wipe body dry with a soft dish cloth.

## CLEANING THE MINERAL DEPOSITS

Regular descaling can prolong the life of the appliance and maintain optimal brewing results with a constant brewing time.

1. Fill the glass jug with 1/4 vinegar and 3/4 water. Pour the solution into water tank and turn on the appliance.

**Note:** Do not put filter and coffee ground. You can also use an appropriate liquid descaler. In this case, follow the instructions on the package of the descaler.

2. Allow solution to drip through into the glass jug. Press the "ON/OFF" button once, its indicator will on, after a while, water will drop out automatically.
3. After percolate the equivalent of one cup and switch off the appliance by pressing "ON/OFF" button again.
4. Leave the solution work for 15 minutes. Repeat the step of 3-5 times until the water tank is completely empty.
5. After the above steps, fill the water tank with water and run to remove any solution or descaler and scale residues. Repeat as necessary.

**Note:** Let the appliance cool down for approx 3 minutes before each repeat.

## ENVIRONMENT-FRIENDLY DISPOSAL



You can help to protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.





**ELBA**