



# ELBA

## TOASTER

**MODEL: ET-2311X**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.**

## IMPORTANT SAFEGUARDS


When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Never immerse the appliance in water or any other liquids.
3. Do not operate the appliance with damaged power cord or plug, after the appliance malfunction, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized dealer or after-sales service center for examination, repair, electrical or mechanical adjustment.
4. Do not let the power cord hang over edge of table or counter or hot surface.
5. To disconnect the plug from wall outlet, grasp the plug and not the cord.
6. Do not leave the appliance unattended while it is operating.
7. Always place the appliance on a flat and stable surface.
8. Do not touch the product body. Use handles or knobs only.
9. Do not remove the toaster while it is operating.
10. **Note:** Oversize food, metal foil packages or utensils must not be inserted into the toaster as they may cause fire, burnt or electric shock.
11. Place the appliance away from curtains, and other combustible materials.
12. Never use any accessories or parts from other manufacturers or that ELBA does not specifically recommend.
13. Do not attempt to dislodge food when toaster is in operation.
14. Be careful when removing the bread from the toaster to avoid injuries.
15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.
17. Unplug the plug from wall outlet when not in use, before putting on or taking off parts, and before cleaning.
18. Do not operate the appliance for other than its intended use.
19. This appliance is for domestic use only.
20. Do not use this toaster outdoors.
21. Save these instructions for future reference.


### Caution:

1. If toaster starts to smoke, Press "**Cancel**" to stop toasting immediately.
2. Remove all protective wrapping of the bread before placing into the toaster.
3. Avoid toasting the food with extremely runny ingredients when get hot such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing the bread.
5. This toaster is only applicable for toasting regular bread slice.

## PRODUCT DESCRIPTION

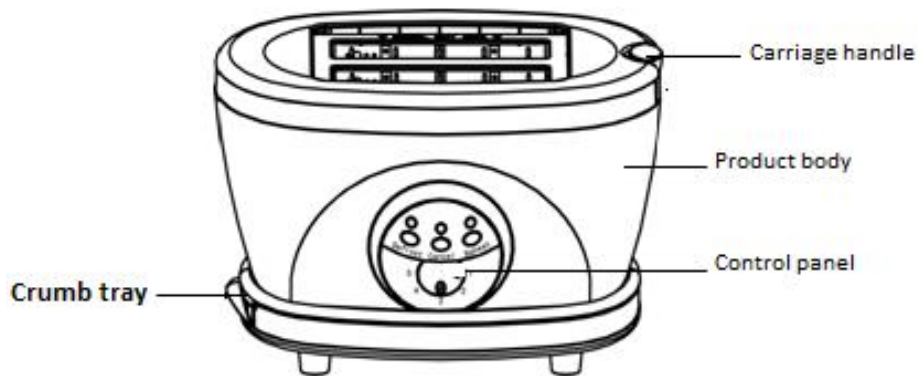

## CONTROL PANEL

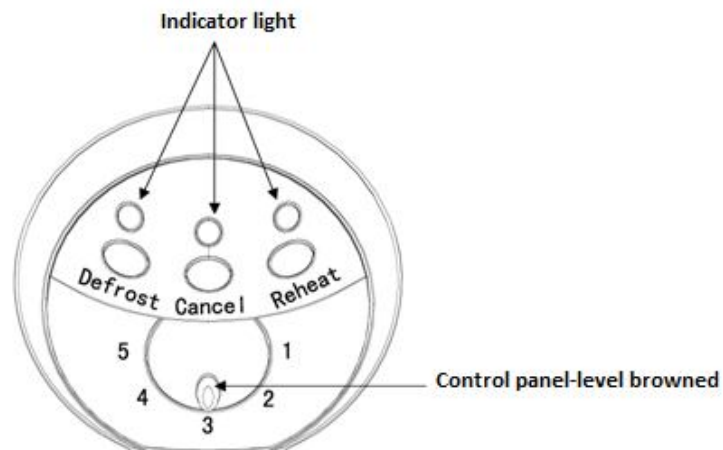

## BEFORE THE FIRST USE

As there is residue or oil remained in the toaster or heating element, it usually will emit the odor for the first use. It is normal and will not occur after several times use. For the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

## OPERATING THE APPLIANCE

1. Place the toaster on a stable, horizontal and level surface.
2. Connect the plug to the wall outlet and power on the appliance.
3. Set the level of browning for the bread by adjusting the knob on the control panel according to your desired taste. There are 5 levels; the lowest brownish is set at "1". The "3" position can toast the bread to golden color. Respectively, "5" position is the darkest brownish color.

**Note:** Browning color of a single bread is darker than that of double bread at the same level.

4. Press carriage handle down vertically until the indicator light above the "**Cancel**" button turns red, and the toasting will begin. Once the bread has been toasted to the preset color, the carriage handle will bounce up automatically.

**Note:** The toasting process can be terminated at any time by pressing the "**Cancel**" button.

5. If the bread is just being taken out from refrigerator, defrost the bread first by pressing "**Defrost**" button and the indicator light above will turn red. Under this mode the bread will be toasted to the preset color.
6. If you want to reheat the cold toasted bread, press the "**Reheat**" button and the indicator light above will turn red. Under this mode the toasting time is fixed. When the time is up, the carriage handle will automatically bounce up to end the reheating process.

## CLEANING AND MAINTENANCE

1. Power off the appliance. Disconnect the plug from the wall outlet.
2. Wipe the product body with soft dry cloth after the toaster cools down. Never use metal polish.
3. Pull out crumb tray at the bottom of the toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely inserted back to the toaster before using it again.
4. When the appliance is not used or for storage, the power cord can be wound under the bottom of toaster.
5. Do not immerse the appliance, cord, plug, or any parts of the toaster in water or any other liquids.

**ELBA**