

# INSTRUCTION MANUAL

---

# ELBA

## SHOWCASE

Model: EHSC-E1080TW(BK)  
EHSC-E1311TW(BK)

### CONTENTS

- SAFETY PRECAUTIONS .....1 ~ 3
- HOW TO USE ..... 4 ~ 5
- CLEANING ..... 5
- IN CASE OF THE FOLLOWING .....6
- BEFORE REQUESTING SERVICE .....7



Please read these instructions completely before operate the showcase.

# SAFETY PRECAUTIONS

- To ensure proper use, please study these SAFETY PRECAUTIONS before operate the showcase.
- The purpose of the safety precautions in this manual is to ensure safe and proper way to use the showcase as to minimize risks that could cause serious damage and injury to you or third parties. The safety precautions are divided into WARNING and CAUTION. Cases where improper handling of the showcase could lead to death or serious injury are listed under the "⚠️WARNING". However, the cases listed under the "⚠️CAUTION" could lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.



**WARNING** Improper handling of the showcase could lead to death or serious injury.



**CAUTION** Improper handling of the showcase could lead to serious results depend on circumstances.

- The exclamation mark ⚠️ contains information that should be strictly adhered to.
- After read the instruction manual, store it at easily accessible place where the user(s) of this product can easily found.

## ◆ PRECAUTIONS FOR INSTALLATION

### ⚠️ WARNING



Installation should be performed by a qualified technicians. Attempting to install the showcase by yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

 
## ◆ PRECAUTIONS FOR USE

### ⚠️ WARNING




DONT TAMPER

All repairs, disassembly and modifications should be performed by qualified technicians. Attempting to perform these by yourself could result in a fire, malfunction, and injury.

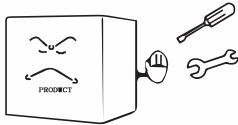


ELECTRICAL SHOCK HAZARDS

Never splash water directly onto the showcase or wash with water as short-circuit and electrical leakage could result.

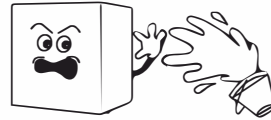

DANGER OF EXPLOSION

 Never put flammable or volatile substances into the showcase as this might result in explosion or fire.

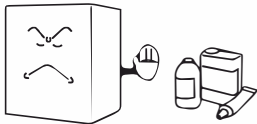

PROHIBITED

Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Besides, place the heavy objects on power cord or squeezing it in a tight place could damage it and result in electrical shock or fire.




PROHIBITED

Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating or fire.



FLAMMABLE

Never use flammable spray cans or leave flammable substances near the showcase. Sparks from electrical switches could result in explosion and fire.

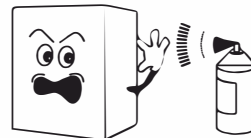


# SAFETY PRECAUTIONS

## ! WARNING




The showcase is intended for storage and display of beverages for sale. Do not use for other purpose than intended as this could adversely affect items placed in the showcase.

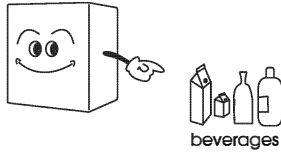


ROTATING DEVICE

Never attempt to insert fingers, sticks or any objects into the cold air suction outlet as the circulation fan is rotate at high speed inside the showcase. This could result in injury, electrical shock or malfunction.

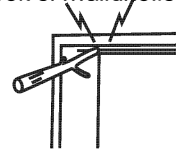


PROHIBITED

For indoor use only. If use the showcase in a location that expose to rain could result in electrical leakage and electrical shock.

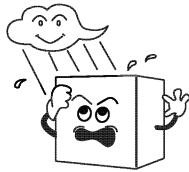


PROHIBITED

Never place heavy objects or items that contain water on top of the showcase. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.

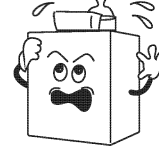


Install the showcase in a location where the floor is stable enough to support the load of the showcase. If the floor is not stable enough or installation is incorrectly performed, the showcase could tip over and falling shelves and products could cause personal injury.

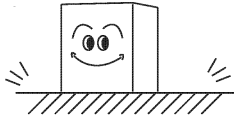


CAUTION AGAINST EXPLOSION

If you find gas leakage, please don't touch the showcase. Turn off the showcase immediately and open the door for ventilation. Gas leakage could cause explosion, fire, and fire.

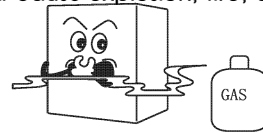


Store the showcase in a location where it is not directly exposed to rain. If use the showcase that has been exposed to rain will could result in electrical leakage and electrical shock.

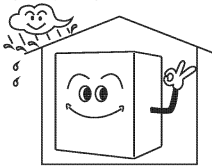

Keep the showcase away from hot air area such as hot plates and stoves or exposed direct to sunlight as the cooling performance could reduced.



Leave disassembly and disposal of the showcase to qualified technicians.

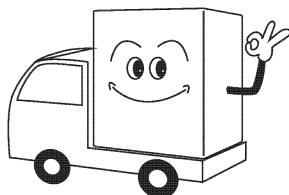


If the showcase need temporary storage, make sure not to store the showcase in a location where children can be reached. This will minimize the risk that a child being trapped inside the showcase.

# SAFETY PRECAUTIONS

## ! WARNING


### WELL VENTILATED PLACE

Please make sure there is more than 10cm space between the showcase and the wall. If there is no space in between, the cooling performance could be affected.

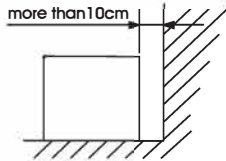


DANGER OF ELECTRICAL SHOCK

If installation in a damp location is unavoidable, please install an electrical leakage circuit breaker. If without the electrical leakage circuit breaker installed, electrical shock could result.

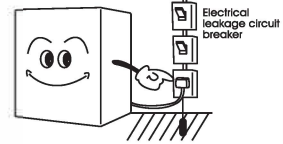


PROHIBITED

Never hang from the door or climb onto the showcase. The showcase could tip over or fall and cause material damage or injury.

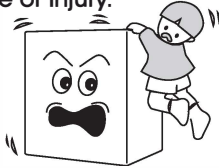

DISCONNECT POWER CORD PLUG FROM WALL OUTLET

Disconnect the power cord plug from the wall outlet before moving the showcase and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock or fire.

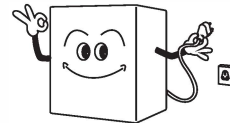

DON'T PINCH FINGERS

Keep holding the handle when closing the door. Holding at other positions could result in injury to the fingers.




Do not touch


Do not put your hand on the showcase glass surfaces as the glass could break and cause injury.



When disconnecting the power cord plug from the wall outlet, please hold the plug main body and pull out. Pulling the cord instead of holding the plug main body could cause wire breakage, possibly resulting in overheating and fire.

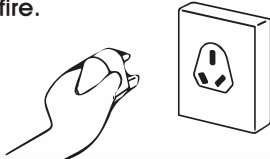

Make sure that the showcase does not tip over or fall when it is moved. A falling showcase could cause serious injury.

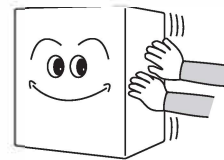

PROHIBITED

Do not throw items onto the shelves and do not place items with a total more than 65lbs on each shelf. The shelf could fall down and cause injury.



Please make sure that the shelves are installed correctly. An improperly attached shelf could fall down and cause injury.



# HOW TO USE

---

## BEFORE USE

- Remove shipping package, tape, or others and leave doors open ventilate until the smell completely gone.
- Although the showcase is cleaned before shipment. Please do clean the showcase interior after purchase.
- Please ensure the wall outlet is suitable for showcase before insert power supply plug into the wall outlet.
- Allow the showcase to operate for about 1 hour to cool the compartment before place beverages into the showcase for the first time.

## WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the showcase immediately after it had been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or others damage may occur.

## TEMPERATURE ADJUSTMENT

**The showcase factory default setting for the showcase interior temperature will be kept at 0-10°C (Fully loaded). If the ambient temperature is extremely high or the beverages in the showcase are too much, this might cause the showcase interior temperature slightly higher. In this case, please turn the thermostat to clockwise to set the right temperature. In opposite, if the ambient temperature is very low or the showcase empty loaded, the showcase interior temperature might able to reach -0°C . This will cause the evaporator frozen, thus please turn the thermostat back to anticlockwise as to set the right temperature.**

## DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. If high humidity, there is a large amount of water in the drain tray, so please throw away drain water once a day.

## EFFICIENT USE

- To prevent cold air escape from showcase, open and close the door immediately after used.
- Please install the showcase in the place which is well-ventilated (10cm space in between the wall and the showcase).

## SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

Arrange the shelves in accordance with the dimensions of the beverages to be placed in the showcase.

# HOW TO USE

## PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put the beverages on the shelf.

INSTRUCTION MANUAL

## CLEANING



WARNING

To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before clean the showcase.

## 1 EXTERIOR AND SHOWCASE COMPARTMENT

Wipe with a soft, dry cloth. If the showcase very soiled, wipe with a cloth that has been moistened with a detergent Then wipe with a cloth that has been dipped in water.



WARNING

WARNING: Do not splash water directly onto the showcase and do not wash with water. Short - circuit and electrical shock could result.

- Clean the showcase regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as these will damage the painting and plastic components.



## 2 CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

# IN CASE OF THE FOLLOWING

---

## 1 POWER FAILURE

Keep open and close of the door to a minimum.

Avoid to place new items in the showcase as this will increase the temperature inside the showcase.

## 2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the showcase and disconnect the power cord plug from the wall outlet.

Clean the showcase interior and wipe away all water.

To prevent mold formation and bad smell, leave the door open to dry the showcase completely.

## 3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet.

When move the showcase, make sure not to damage the power cord as it could result in malfunction or electrical leakage.

## 4 TEMPORARY STORAGE

Affix a piece of wood, or other objects between the door and the showcase as to prevent complete closing of the door. Make sure not to store the unused showcase at a location where children can be reached. This is minimize the risk that a child being trapped inside the showcase.

### INSTRUCTION MANUAL

# BEFORE REQUESTING SERVICE

---

Please check the following items if you encounter problems with the showcase. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the showcase to a box or other container. Then contact the dealer from whom you purchased this showcase and be ready to provide information as listed in "REQUIRED INFORMATION" below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

# BEFORE REQUESTING SERVICE

No refrigeration at all	<ul style="list-style-type: none"><li>● Is the power supply interrupted?</li><li>● Is the power cord plug disconnected from the wall outlet?</li><li>● Are the shop's power fuses blown and/or the circuit breaker activated?</li></ul>
Inadequate refrigeration	<ul style="list-style-type: none"><li>● Is the temperature setting appropriate?</li><li>● Are items obstructing the cold air inlet and suction outlet?</li><li>● Are stored items packed too tight?</li><li>● Is the door open or is it opened and closed frequently?</li><li>● Is the condenser clogged?</li></ul>
Excessive noise	<ul style="list-style-type: none"><li>● Are all feet in firm contact with the floor?</li><li>● Is the rear panel of the showcase contacting the wall or other objects?</li><li>● Are other objects in contact with the showcase?</li></ul>
Condensation on showcase exterior	<ul style="list-style-type: none"><li>● Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. wipe away condensation with a dry cloth.</li></ul>

\*Showcase will stop running when thermostat turns off.

INSTRUCTION MANUAL

## REQUIRED INFORMATION

- |  |   |
|--|---|
| ① Nature of malfunction<br>(as accurately as possible) | ④ Customer's name, address,<br>phone number |
| ② Product number                                       | ⑤ Year and date of purchase                 |
| ③ Serial number  | ⑥ Desired date for service visit            |
- } LISTED IN WARRANTY CARD



**ELBA**