

# ELBA

## **THERMO POT MODEL: ETP-G5083(CG)**

### **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.**

**ELBA**


## IMPORTANT SAFEGUARDS

Read this instruction manual carefully before operating the appliance and keep it for future reference.


1. Never immerse the appliance in water or any other liquids, nor rinse it under the tap.
2. Check if the voltage indicated on the appliance corresponded to the local mains voltage before you connect the appliance.
3. Do not use the appliance if the plug, the power cord or the appliance itself is damaged.
4. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid hazards.
5. Keep the power cord out of children. Do not let the power cord hang over the edge or the table or worktop on which the appliance stands.
6. Wait until the appliance has cooled down before cleaning, removing or replacing the lid.
7. Take extreme care when removing the appliance if it contains hot water.
8. This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Always use the appliance on a flat, stable and heat resistant surface to prevent the power cord from coming into contact with hot surfaces.
11. Unplug the appliance before cleaning and when problems occur during dispensing.
12. Never over filling water into the water tank as it may cause splash! Refer to the "full" water level mark in the water tank.
13. Keep hands or any part of your body from the water outlet for a second or two right after you press the dispense button as hot water emitted from the water outlet may splash.
14. This appliance is for boiling water only.
15. This appliance is for domestic use only.
16. Do not use the appliance outdoor.

**Warning: Never open the lid when water is boiling!**

# PRODUCT DESCRIPTION

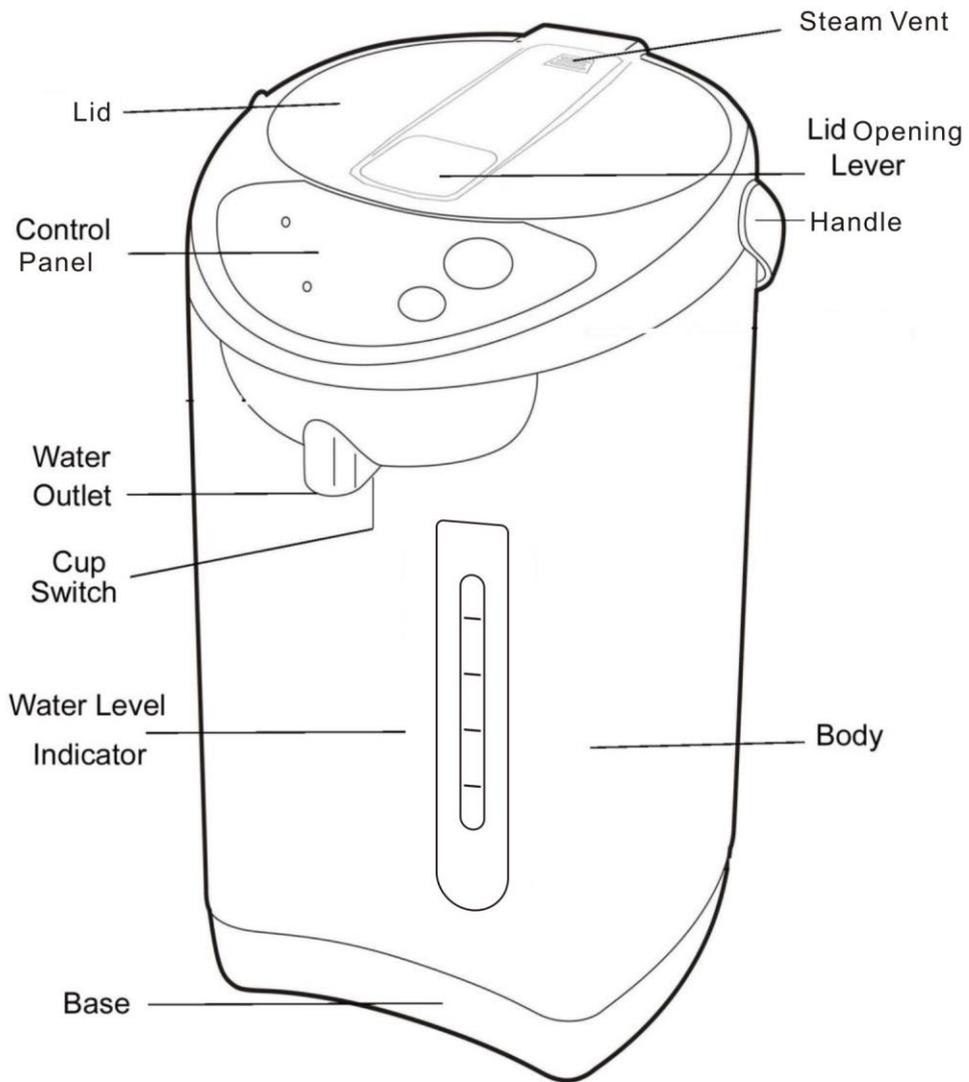

## OPERATING THE APPLIANCE FOR THE FIRST TIME

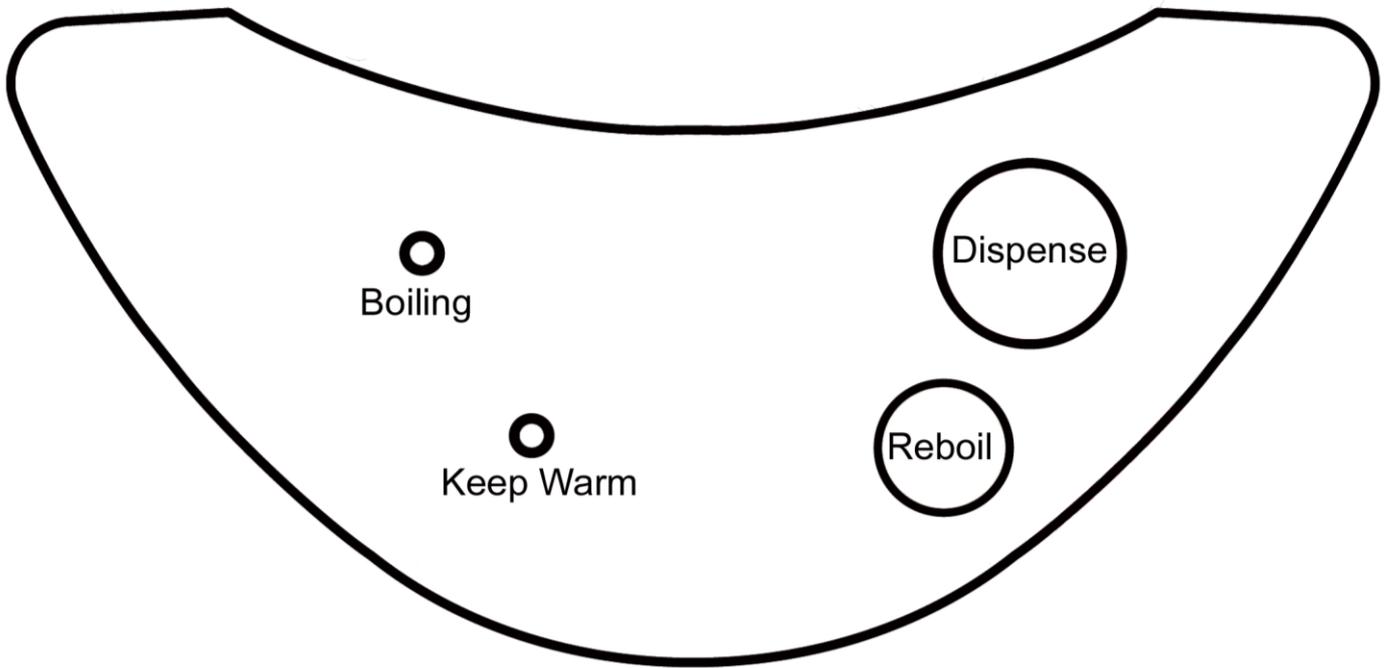


1. Wash and rinse water tank with water.
2. Fill water up to full mark.
3. Boil once and discard the water (press the dispense button).

## REMOVE AND ATTACH THE LID

### Detach Lid


Place the handle towards the rear side of the thermo pot. Then open the lid by pulling up the lid opening lever (caution: be careful of the steam from the steam vent). Position the lid at 45 degree and pull out the lid from the hinge holder by pressing the hinge lock at the rear of the lid.

Note: Never remove the lid while the water is boiling.

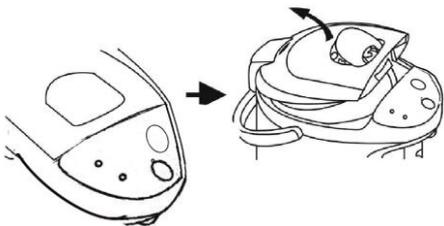


## Attach Lid

Place the handle towards the rear side of the thermo pot. Press the hinge lock, at the same time insert the shaft of the hinge of the lid into the hinge holder. Ensure that the lid is attached properly and close the lid until it clicks.

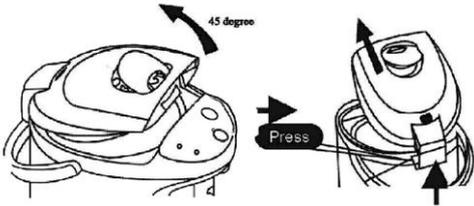


## OPERATING THE APPLIANCE
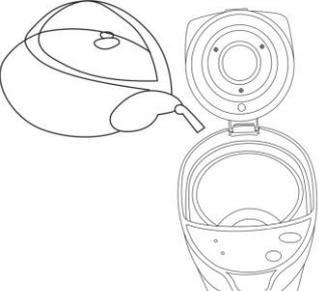
|   |   |
|---|---|
| <p><b>To open the lid and fill water</b></p> <p>Pull the lid opening lever up to open the lid and fill water into the water tank.</p>   | <ul style="list-style-type: none"><li>● Always fill water above the minimum water level mark and below the maximum water level mark.</li><li>● Refer to the water level mark in the water tank.</li></ul>   |
| <p><b>To close the lid</b></p> <p>Close the lid by pressing down until it clicks.</p> <ol style="list-style-type: none"><li>1. Insert the connector into the power inlet.</li><li>2. Then, insert the plug into the wall outlet.</li></ol> <p><b>WARNING:</b> Do not power on the appliance if the water tank is empty.</p>  | <ul style="list-style-type: none"><li>● Do not close the lid by force.</li><li>● Connect the plug to the power inlet horizontally.</li></ul>  |
| <p><b>To boil water</b></p> <ol style="list-style-type: none"><li>1. After power on the thermo pot, “boil” (in red)</li></ol>   | <ul style="list-style-type: none"><li>● Do not open the lid or dispense water while the water is boiling.</li><li>● Do not add water when water is boiling.</li><li>● Do not contact any parts of your body to the steam vent.</li><li>● Do not place cloth or any other items to cover the steam vent.</li></ul> |

|   |  |
|---|--|
| <p><b>Keep warm</b></p> <ol style="list-style-type: none"> <li>1. The keep warm function will be activated and the “keep warm” light indicator (in green) will turn on after water boiled.</li> <li>2. Press the “re-boil” button if cold water had been added or if you wish to re-boil the water again.</li> </ol>  |  |
| <p><b>Dispense hot water</b></p> <p><b>1. Dispense button</b></p> <p>a) Press the “dispense” button to dispense hot water.</p> <p>Note: The hot water may not dispense immediately right after boiling. Keep pressing until the water is dispensed.</p>  <p><b>2. Cup switch</b></p> <p>a) Push up the cup switch with your cup to dispense hot water.</p> <p>Note:</p> <ul style="list-style-type: none"> <li>● The dispensing function will NOT operate if the thermo pot is not connected to the main switch.</li> </ul> | <ul style="list-style-type: none"> <li>● CAUTION: Always keep hands or any parts of your body from the water outlet for a second or two right after you press the dispense button.</li> <li>● Do not press the dispense button when the inner water reservoir is empty.</li> <li>● You cannot dispense hot water by pressing the dispense button, or cup switch if the thermo pot is unplugged.</li> </ul> |
| <p><b>Refill water</b></p> <p>When water level is low, add water for automatic re-boil.</p>   | <ul style="list-style-type: none"> <li>● Do not add water above maximum water level mark.</li> <li>● Boil water with insufficient water may cause malfunction.</li> </ul>  |

### To re-boil water under keep warm mode

1. Press the “re-boil” button once. “Boil” light indicator (in red) will be on.
  2. After re-boiling process is completed, the keep warm light (in green) will turn on.
- Re-boil will not function if there is insufficient water inside the water tank.
  - Press the re-boil button immediately after the water boiled will have no effect as the water is already at the temperature of 100°C.

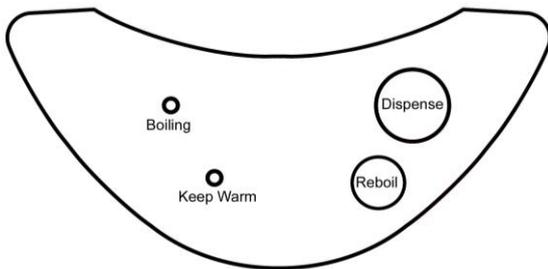

- It will take about 3 minutes to re-boil water (with full water tank) depending on the water temperature.
- Before re-boiling the water, make sure the water level is sufficient.
- When adding water into the water tank, be careful of the hot steam from steam vent and water tank.
- Once the re-boil button is pressed, the boiling process will begin and you cannot reset any button until it turns to keep warm mode.
- Do not press the re-boil button continuously (after re-boiling process) as it may cause malfunction.

### AUTO CUT-OFF

1. When the appliance is dry boiled, the thermo pot will automatically cut off the power.
2. The auto CUT-OFF function will also operate when:
  - The power is switched on, but no water is filled in the water tank.
  - Water level is below the MIN water level mark.

### CLEANING AND MAINTENANCE

1. Always allow the appliance to cool down before cleaning.
2. Remember to unplug the plug from wall socket and connector.
3. Open the lid and pour out the remaining water in the water tank.


Wipe the lid and body with a damp cloth.




- Never immerse any part of the thermo pot in water.
- Never splash water on the control panel.
- Do not use abrasive materials to clean the appliance.

|  |  |
|--|--|
| <p>Discoloration of the water tank and white floating objects in the water tank.</p>  | <ul style="list-style-type: none"> <li>● Red rust-like spots, milky or black discoloration, and white floating objects are caused by minerals in the water and are not caused by discoloration or deterioration of the water tank itself. Although this is not a hygiene problem, you are advisable to clean the water tank periodically.</li> <li>● Cut a lemon into four pieces and wrap the lemon in the cloth then put in the water tank.</li> <li>● Pour water up to the full level mark in the water tank.</li> <li>● Boil the water and then retain the heat for about one hour.</li> <li>● Pour out the water and use a nylon brush to clean the water tank.</li> <li>● To remove the smell of the lemon, you can boil the water again and dispose the water.</li> </ul> |
| <p>Stainless steel water reservoir.</p>  | <ul style="list-style-type: none"> <li>● Wash the water tank with a sponge and then rinse with clean water. <b>IMPORTANT:</b> Do not use the following to clean the container.</li> <li>● Dish soap (this causes an unpleasant odor)</li> <li>● Scrubbing powder or scrubbing brushes (it will damage the container and lid.)</li> <li>● Benzene (it will cause damage to the plastic of the lid)</li> </ul>   |

## HAZARDS

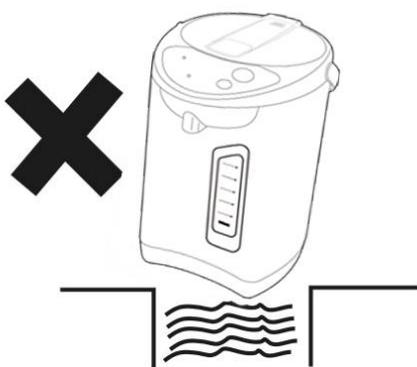

Do not immerse the thermo pot, power cord or plug in the water or any other liquids to prevent electric shock.

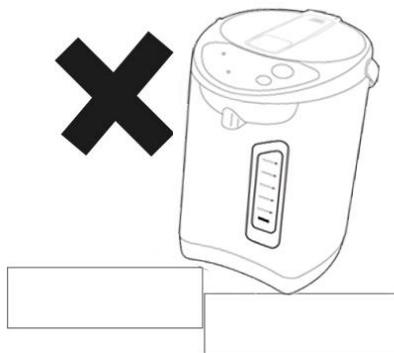


Do not place the thermo pot on unstable surfaces.



Fill the water tank with tap or filtered water (do not fill with milk or any other liquids).



Do not fill the thermo pot with water above the full mark inside the water tank or lower than the minimum water level to avoid damage to the appliance.

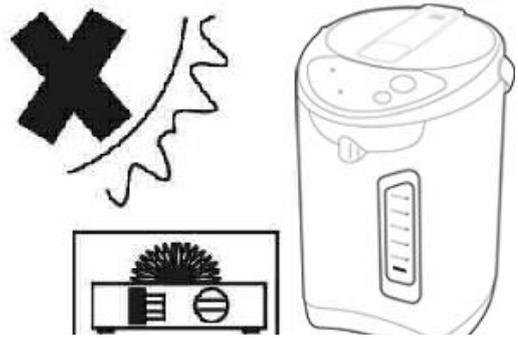

Do not place the thermo pot on or near to hot surface.

#### Direction to dispose the product



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle if responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.